

 


AVENTURA 307 RALLY NEGRA 2026

Exploded




ENGINE - EFI COMPONENTS

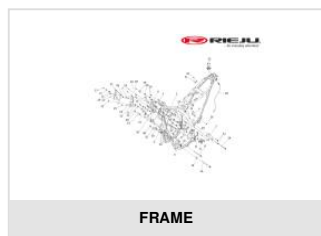

FRAME



 
STEERING HEAD

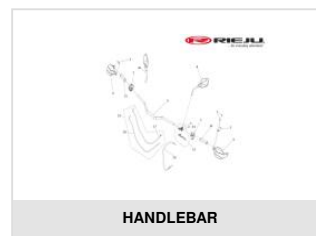


HANDLEBAR



 FRONT MUDGUARD

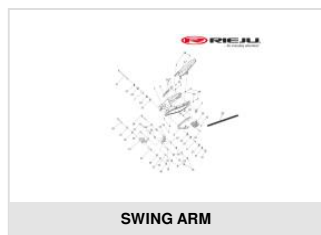

SWING ARM

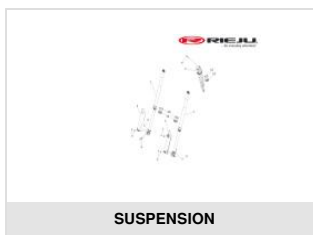 


SUSPENSION



INTAKE SYSTEM



 RUEDA DELANTERA

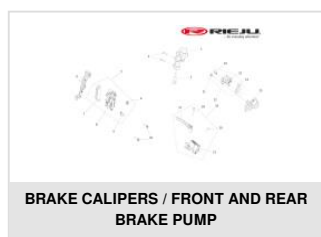

BRAKE CALIPERS / FRONT AND REAR
BRAKE PUMP



ABS ASSY.



REAR WHEEL



FOOTREST - LEVERS



SIDE STAND



REAR MUDGUARD - LICENSE PLATE
LIGHT - REAR TURN SIGNAL ASSY.



 
FRONT HEADLIGHT



COOLING SYSTEM - EXHAUST



FUEL TANK

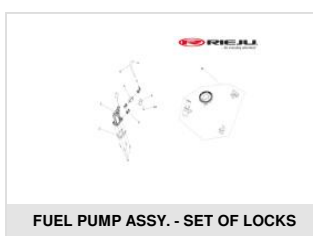

FUEL PUMP ASSY. - SET OF LOCKS



 
FUEL TANK COVERS




BODY SIDE COVER COMPONENTS



ENGINE PROTECTOR

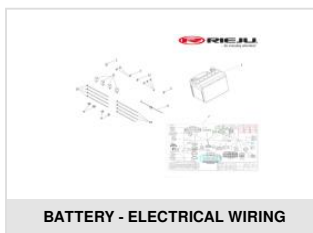


BATTERY - ELECTRICAL WIRING

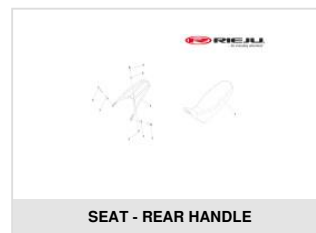 

SEAT - REAR HANDLE




 ELECTRICAL COMPONENTS

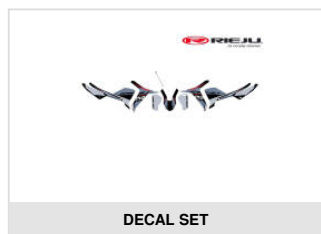


DECAL SET

 YF300F AVENTURA 307 RALLY

 CYLINDER HEAD	 CYLINDER	 VALVES - TIMING CHAIN	 CARTER
 CLUTCH COVER	 RIGHT COVER	 CRANKSHAFT - PISTON - BALANCER SHAFT	 GEARBOX
 SELECTOR SHAFT	 OIL PUMP	 COOLING SYSTEM	 EMBRAGUE
 STATOR ASSY.			

 
ENGINE - EFI COMPONENTS

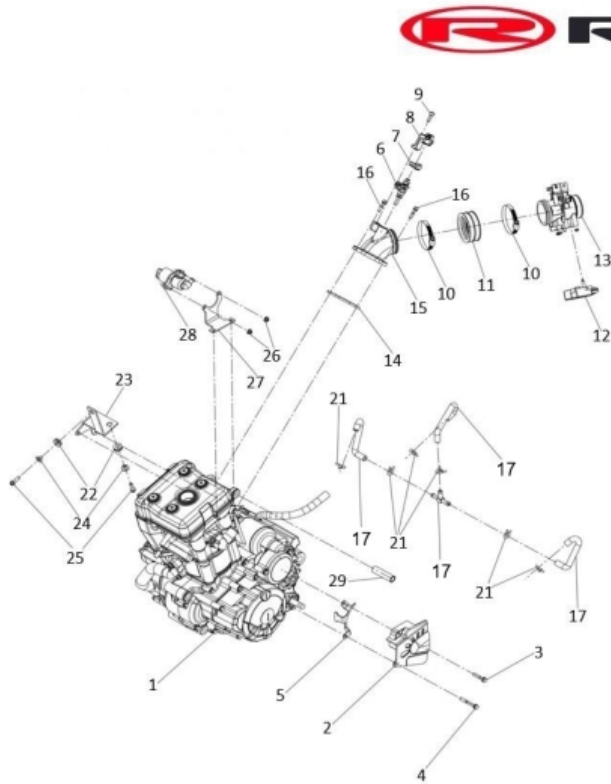

- | | |
|----|---|
| 1 | ● COMPLETE ENGINE RALLY 307
0/005.082.4701 (u. 1) |
| 2 | ● CHAIN SPROCKET GUARD
0/000.220.4701 (u. 1) |
| 3 | ● SCREW M6x30
0/000.460.4787 (u. 1) |
| 4 | ● SCREW M6x45
0/000.460.4788 (u. 1) |
| 5 | ● SPROCKET GUARD BRACKET
0/000.980.4730 (u. 1) |
| 6 | ● FUEL INJECTOR RALLY 307
0/005.158.4701 (u. 1) |
| 7 | ● AGRAFE INJECTEUR
0/000.240.4704 (u. 1) |
| 8 | ● INJECTOR BRACKET
0/000.980.4703 (u. 1) |
| 9 | ● INJECTOR BRACKET SCREW
0/000.460.4711 (u. 1) |
| 10 | ● CLAMP 60-80
0/000.680.4715 (u. 2) |
| 11 | ● INJECTION BODY PIPE
0/000.360.4701 (u. 1) |
| 12 | ● TPS SENSOR
0/001.010.4707 (u. 1) |
| 13 | ● FUEL INJECTION BODY
0/005.158.4702 (u. 1) |
| 14 | ● INJECTION BODY PIPE GASKET
0/000.490.4710 (u. 1) |

15	●	INLET PIPE INJECTION BODY 0/000.360.4703 (u. 1)
16	●	TORNILLO HEXAGONAL M6x25 0/000.460.4701 (u. 2)
17	●	CJTO TUBOS DESVAPORIZADORES 0/000.290.4702 (u. 1)
21	●	OIL HOSE CLAMP Ø12 0/000.680.4722 (u. 3)
22	●	SILENTBLOCK Ø8xØ18xØ10.5X8 0/000.360.4706 (u. 2)
23	●	ABS MODULE BRACKET 0/000.980.4729 (u. 1)
24	●	SEPARADOR 6x18x10 0/000.480.4701 (u. 2)
25	●	SCREW M6x20 0/000.460.4721 (u. 2)
26	●	NUT M6 0/000.340.4704 (u. 2)
27	●	SOPORTE MOTOR PASO A PASO 0/000.980.4719 (u. 1)
28	●	MOTOR PASO A PASO 0/005.082.4703 (u. 1)
29	●	SPACER Ø15xØ11X56 0/000.480.4724 (u. 1)

 
FRAME

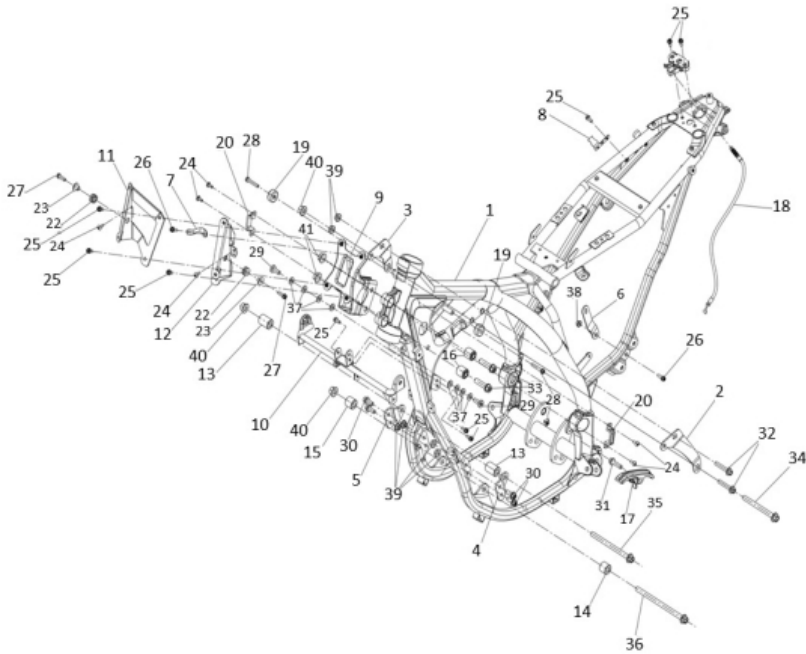

1	● FRAME RALLY 307 0/000.010.4701 (u. 1)
2	● UPPER ENGINE BRACKET LH 0/000.980.4709 (u. 1)
3	● UPPER ENGINE BRACKET RH 0/000.980.4710 (u. 1)
4	● FRONT ENGINE BRACKET LH 0/000.980.4711 (u. 1)
5	● FRONT ENGINE BRACKET RH 0/000.980.4712 (u. 1)
6	● AIR FILTER BRACKET 0/000.980.4713 (u. 1)
7	● SIDE STAND SPRING HOOK 0/000.980.4728 (u. 1)
8	● LIGHT RELAY BRACKET 0/000.980.4714 (u. 1)
9	● FRONT HEADLIGHT BRACKET 0/000.980.4715 (u. 1)
10	● LOWER FUEL TANK BRACKET 0/000.980.4716 (u. 1)
11	● HEADLIGHT BRACKET RH 0/000.980.4717 (u. 1)
12	● HEADLIGHT BRACKET LH 0/000.980.4718 (u. 1)
13	● FRONT UPPER ENGINE SPACER 0/000.480.4720 (u. 2)
14	● FRONT LH ENGINE SPACER 0/000.480.4721 (u. 1)

15	● FRONT RH ENGINE SPACER 0/000.480.4722 (u. 1)
16	● HEADLIGHT BRACKET BUSHING 0/000.480.4723 (u. 2)
17	● CHAIN SLIDER 0/000.360.4705 (u. 1)
18	● SEAT LOCK CABLE 0/000.550.4701 (u. 1)
19	● FUEL TANK SILENTBLOCK 0/000.360.4710 (u. 2)
20	● U TYPE CLIP 0/000.680.4721 (u. 2)
22	● SILENTBLOCK Ø8xØ20xØ13x12 0/000.360.4716 (u. 2)
23	● SPACER Ø6xØ22x12 0/000.480.4704 (u. 2)
24	● TORNILLO TORX. M5x12 0/000.460.4714 (u. 6)
25	● SCREW M6x12 0/000.460.4719 (u. 9)
26	● SCREW M6x16 0/000.460.4720 (u. 2)
27	● SCREW M6x20 0/000.460.4721 (u. 2)
28	● SCREW M6x35 0/000.460.4722 (u. 2)
29	● HEX BOLT M8x45 0/000.460.4704 (u. 2)
30	● ALLEN SCREW M8x20 0/000.460.4724 (u. 4)
31	● HEX BOLT M8x30 0/000.460.4726 (u. 1)
32	● TORNILLO HEX. M8x45 0/000.460.4703 (u. 2)
33	● HEX BOLT M10x40 0/000.460.4729 (u. 2)
34	● SCREW M10x1.25x105 0/000.460.4739 (u. 1)
35	● SCREW M10x1.25x130 0/000.460.4740 (u. 1)
36	● SCREW M10x1.25x160 0/000.460.4741 (u. 1)
37	● FLAT WASHER M8 0/000.440.4705 (u. 8)
38	● NUT M6 0/000.340.4713 (u. 1)
39	● SELF-LOCKING NUT M8 0/000.340.4707 (u. 6)
40	● SELF-LOCKING NUT M10 0/000.340.4708 (u. 3)
41	● SERRATED FLANGE NUT M10x1.5 0/000.340.4703 (u. 2)

 
STEERING HEAD

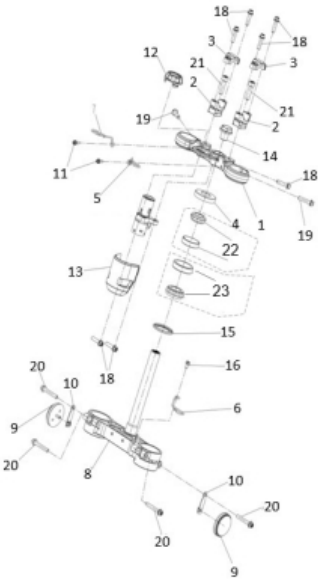

1	● UPPER TRIPLE CLAMP 0/000.660.4701 (u. 1)
2	● LOWER HANDLEBAR CLAMP 0/000.350.4711 (u. 2)
3	● UPPER HANDLEBAR CLAMP 0/000.350.4712 (u. 2)
4	● UPPER STEERING STEM DUST COVER 0/000.200.4701 (u. 1)
5	● CABLE CLIP 0/000.680.4710 (u. 1)
6	● CABLE CLIP 2 0/000.680.4711 (u. 1)
7	● CABLE CLIP 3 0/000.680.4712 (u. 1)
8	● PLATINA INFERIOR HORQUILLA + EJE DIRECCION 0/000.660.4702 (u. 1)
9	● FRONT REFLECTOR 0/000.630.4701 (u. 2)
10	● FRONT REFLECTOR BRACKET 0/000.980.4704 (u. 2)
12	● IGNITION SWITCH TRIM COVER 0/000.350.4713 (u. 1)
13	● IGNITION SWITCH SIDE TRIM 0/000.350.4714 (u. 1)
14	● UPPER STEERING BOLT 0/000.460.4785 (u. 1)
15	● LOWER STEERING STEM DUST COVER 0/000.200.4702 (u. 1)

16	● SCREW M6x12 0/000.460.4719 (u. 1)
17	● SCREW M6x16 0/000.460.4720 (u. 2)
18	● HEX BOLT M8x30 0/000.460.4726 (u. 7)
19	● HEX BOLT M8x35 0/000.460.4727 (u. 2)
20	● HEX BOLT M8x50 0/000.460.4728 (u. 4)
21	● ALLEN SCREW M10x1.5x35 0/000.460.4708 (u. 2)
22	● UPPER STEERING BEARING ASSEMBLY 0/K00.960.4713 (u. 1)
23	● LOWER STEERING BEARING ASSEMBLY 0/K00.960.4714 (u. 1)

 
HANDLEBAR

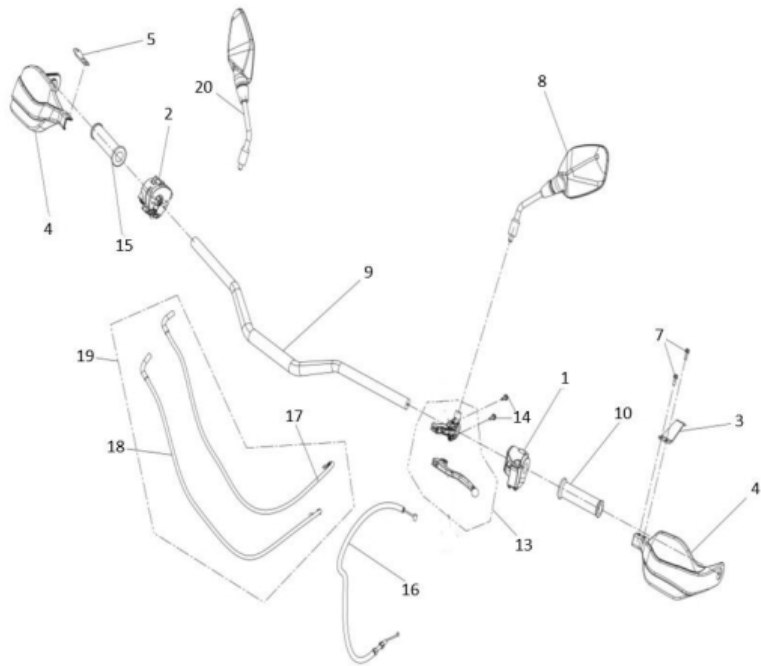

- | | |
|----|---|
| 1 | ● LEFT SWITCH
0/000.720.4702 (u. 1) |
| 2 | ● RIGHT SWITCH
0/000.720.4703 (u. 1) |
| 3 | ● HANDGUARD BRACKET LH
0/000.980.4725 (u. 1) |
| 4 | ● HANDGUARD SET FOR RALLY 307
0/K00.770.4701 (u. 1) |
| 5 | ● HANDGUARD BRACKET RH
0/000.980.4726 (u. 1) |
| 7 | ● TORX SCREW WITH WASHER M6x16
0/000.460.4718 (u. 2) |
| 8 | ● REARVIEW MIRROR LH
0/000.990.4701 (u. 1) |
| 9 | ● HANDLEBAR
0/000.170.4701 (u. 1) |
| 10 | ● RUBBER GRIP LH
0/000.530.4701 (u. 1) |
| 13 | ● COMPLETE CLUTCH LEVER
0/000.830.4702 (u. 1) |
| 14 | ● SCREW M5x24
0/000.460.4702 (u. 2) |
| 15 | ● THROTTLE GRIP WITH RUBBER
0/000.530.4702 (u. 1) |
| 16 | ● CLUTCH CABLE
0/000.550.4705 (u. 1) |
| 17 | ● THROTTLE CABLE
0/000.550.4703 (u. 1) |


18	 THROTTLE CABLE 2 0/000.550.4704 (u. 1)
19	 THROTTLE CABLE SET 0/000.550.4702 (u. 1)
20	 REARVIEW MIRROR RH 0/000.990.4702 (u. 1)

 FRONT MUDGUARD

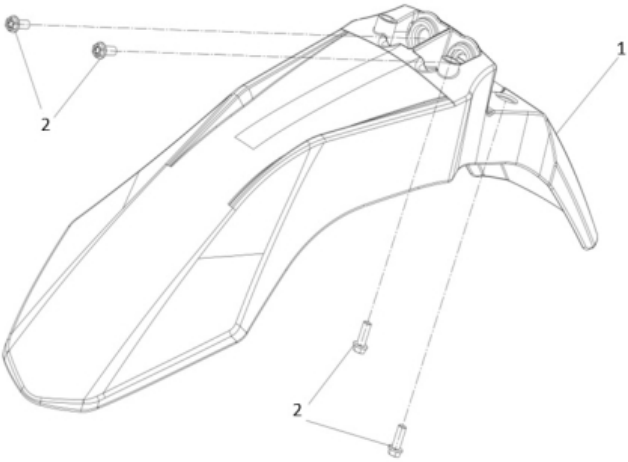

- | | |
|---|---|
| 1 | ● FRONT FENDER RALLY 307
0/000.050.4701 (u. 1) |
| 2 | ● SCREW M6x16
0/000.460.4720 (u. 4) |

 
SWING ARM

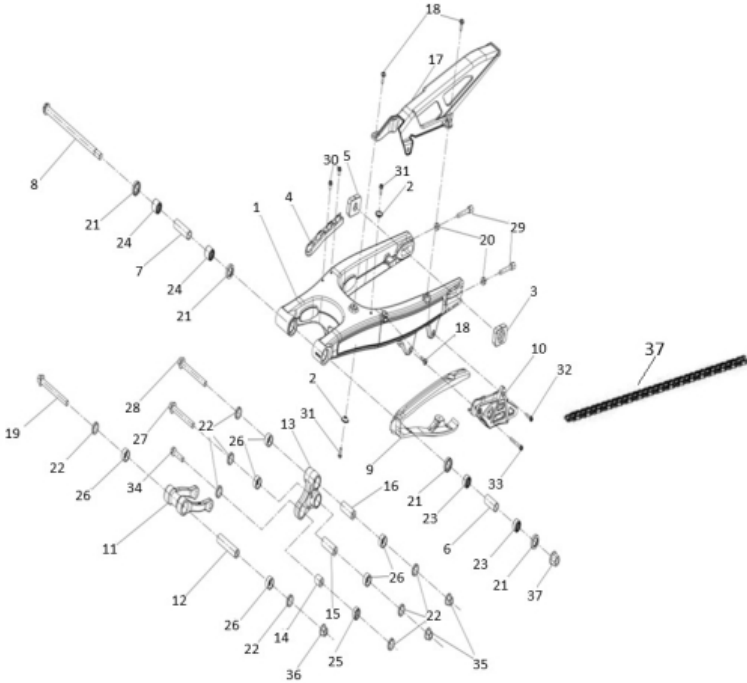

- | | |
|----|--|
| 1 | ● SWINGARM
0/000.020.4701 (u. 1) |
| 2 | ● LOCK WASHER M6
0/000.440.4732 (u. 2) |
| 3 | ● CHAIN ADJUSTER RH
0/000.380.4702 (u. 1) |
| 4 | ● CABLE GUIDE
0/000.630.4703 (u. 1) |
| 5 | ● CHAIN ADJUSTER LH
0/000.380.4703 (u. 1) |
| 6 | ● SWINGARM SPACER LH
0/000.480.4725 (u. 1) |
| 7 | ● SWINGARM SPACER RH
0/000.480.4726 (u. 1) |
| 8 | ● SWINGARM AXLE
0/000.190.4707 (u. 1) |
| 9 | ● CHAIN SLIDER
0/000.360.4707 (u. 1) |
| 10 | ● CHAIN GUIDE
0/000.710.4703 (u. 1) |
| 11 | ● SWINGARM LINKAGE ROD
0/000.770.4710 (u. 1) |
| 12 | ● SWINGARM LINKAGE SPACER
0/000.480.4727 (u. 1) |
| 13 | ● SWINGARM ROCKER LEVER
0/000.980.4720 (u. 1) |
| 14 | ● ROCKER LEVER SPACER 1
0/000.480.4728 (u. 1) |


15	●	ROCKER LEVER SPACER 2 0/000.480.4729 (u. 1)
16	●	ROCKER LEVER SPACER 3 0/000.480.4730 (u. 1)
17	●	CHAIN GUARD 0/000.220.4715 (u. 1)
18	●	SCREW M6x16 0/000.460.4781 (u. 3)
19	●	SCREW M12x115 0/000.460.4784 (u. 1)
20	●	NUT M8 0/000.340.4723 (u. 2)
21	●	OIL SEAL 0/000.890.4708 (u. 4)
22	●	LINKAGE OIL SEAL 0/000.890.4710 (u. 8)
23	●	SWINGARM BEARING 0/000.960.4717 (u. 2)
24	●	SWINGARM BEARING RH 0/000.960.4718 (u. 2)
25	●	ROCKER LEVER BEARING 1 0/000.960.4719 (u. 1)
26	●	ROCKER LEVER BEARING 2 0/000.960.4720 (u. 6)
27	●	SCREW 12x1.25x90 0/000.460.4737 (u. 1)
28	●	SCREW M12x1.25x105 0/000.460.4738 (u. 1)
29	●	SCREW M8x50 0/000.460.4713 (u. 2)
30	●	SCREW M6x12 0/000.460.4719 (u. 2)
31	●	SCREW M6x16 0/000.460.4720 (u. 2)
32	●	SCREW M6x20 0/000.460.4721 (u. 1)
33	●	SCREW M6x45 0/000.460.4723 (u. 1)
34	●	HEX BOLT M10x40 0/000.460.4729 (u. 1)
35	●	SELF-LOCKING NUT M12x1.25 0/000.340.4715 (u. 3)
36	●	SELF-LOCKING NUT M14 0/000.340.4716 (u. 1)
37	●	CHAIN 0/001.050.4702 (u. 1)

 SUSPENSION

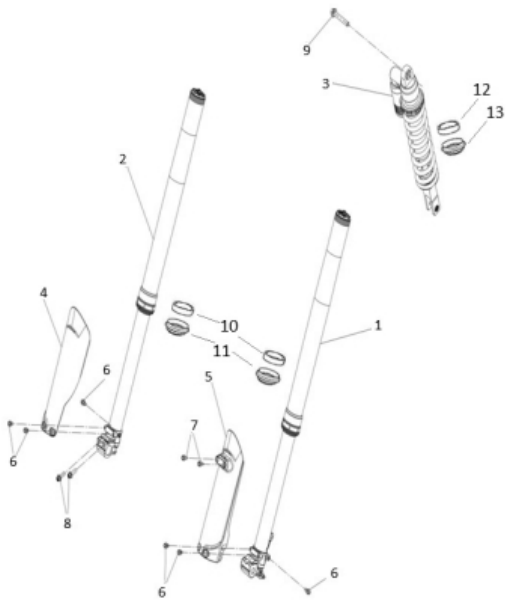

2	 FORK TUBE RH 0/000.130.4701 (u. 1)
3	 REAR SHOCK ABSORBER 0/000.180.4701 (u. 1)
4	 FORK GUARD RH 0/000.220.4717 (u. 1)
5	 FORK GUARD LH 0/000.220.4719 (u. 1)
6	 SCREW M6x12 0/000.460.4742 (u. 6)
7	 PLASTIC THREAD SCREW M6x16 0/000.460.4735 (u. 2)
8	 HEX BOLT M8x25 0/000.460.4725 (u. 2)
9	 SCREW M10x1.25x65 0/000.460.4736 (u. 1)
10	 OIL SEAL FOR FRONT SHOCK ABSORBER 0/000.890.4711 (u. 2)
11	 UPPER FORK DUST SEAL 0/000.200.4703 (u. 2)
12	 OIL SEAL FOR REAR SHOCK ABSORBER 0/000.890.4712 (u. 1)
13	 REAR SHOCK ABSORBER DUST SEAL 0/000.200.4704 (u. 1)

 
INTAKE SYSTEM

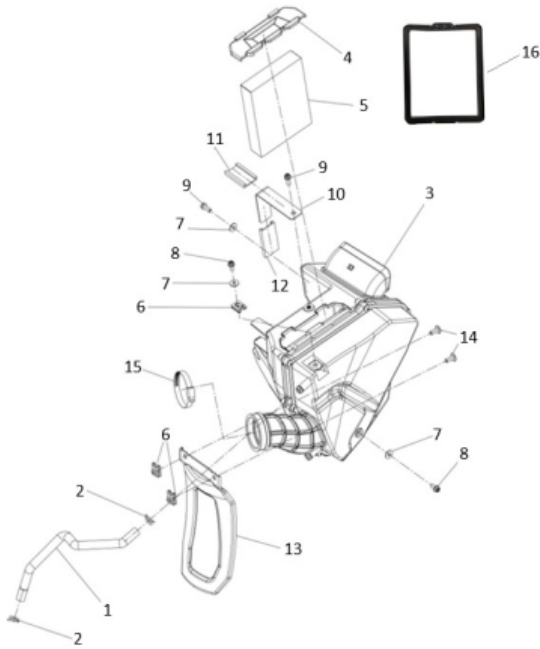

- | | |
|----|--|
| 1 | AIR HOSE 2
0/000.290.4723 (u. 1) |
| 2 | CLAMP Ø14
0/000.680.4702 (u. 2) |
| 3 | AIR FILTER ASSY
0/000.910.4700 (u. 1) |
| 4 | AIR FILTER COVER
0/000.350.4709 (u. 1) |
| 5 | AIR FILTER
0/001.070.4703 (u. 1) |
| 6 | QUICK NUT M6
0/000.340.4712 (u. 3) |
| 7 | FLAT WASHER M6
0/000.440.4706 (u. 3) |
| 8 | SCREW M6x12
0/000.460.4719 (u. 2) |
| 9 | SCREW M6x16
0/000.460.4720 (u. 2) |
| 10 | BATTERY PLATE
0/000.220.4714 (u. 1) |
| 11 | BATTERY PLATE RUBBER PROTECTOR
0/000.220.4712 (u. 1) |
| 12 | BATTERY PLATE RUBBER PROTECTOR 2
0/000.220.4713 (u. 1) |
| 13 | REAR MUDGUARD
0/000.220.4716 (u. 1) |
| 14 | TORX SCREW WITH WASHER M6x16
0/000.460.4718 (u. 2) |

15	CLAMP 50-70 0/000.680.4718 (u. 1)
16	RUBBER FRAME FOR AIR FILTER ELEMENT 0/000.360.4720 (u. 1)

 
RUEDA DELANTERA

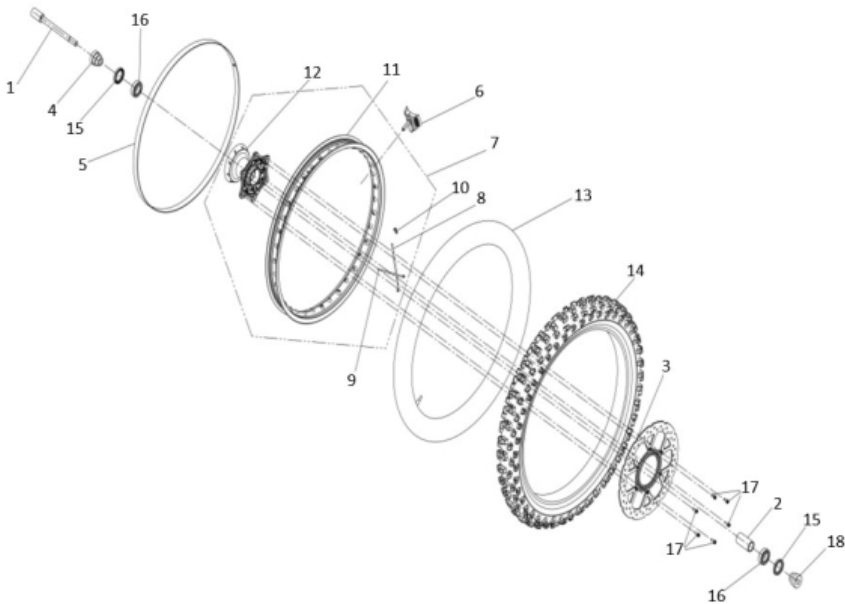

1	● FRONT WHEEL AXLE 0/000.190.4705 (u. 1)
2	● FRONT WHEEL SPACER 0/000.480.4715 (u. 1)
3	● FRONT BRAKE DISC 0/001.090.4701 (u. 1)
4	● FRONT WHEEL SIDE SPACER 0/000.480.4716 (u. 1)
5	● FRONT WHEEL TYRE PROTECTOR 0/000.220.4708 (u. 1)
6	● FRONT WHEEL TUBE HOLDER 0/000.220.4709 (u. 1)
7	● COMPLETE FRONT WHEEL 0/000.230.4701 (u. 1)
8	● FRONT WHEEL OUTER SPOKE 0/000.540.4701 (u. 18)
9	● FRONT WHEEL OUTER SPOKE 0/000.540.4701 (u. 1)
10	● FRONT WHEEL SPOKE NIPPLE 0/000.340.4721 (u. 36)
11	● FRONT WHEEL RIM 0/000.230.4702 (u. 1)
12	● FRONT WHEEL HUB 0/000.070.4701 (u. 1)
13	● FRONT WHEEL INNER TUBE 0/000.520.4701 (u. 1)
14	● FRONT TYRE 90/90-21 0/000.510.4701 (u. 1)

15	● WHEEL OIL SEAL 0/000.890.4709 (u. 2)
16	● WHEEL BEARING 0/000.960.4715 (u. 2)
17	● SCREW M6x16 0/000.460.4720 (u. 6)
18	● BUSH FOR FRONT WHEEL RIGHT SIDE 0/000.480.4736 (u. 1)

 
BRAKE CALIPERS / FRONT AND REAR BRAKE PUMP

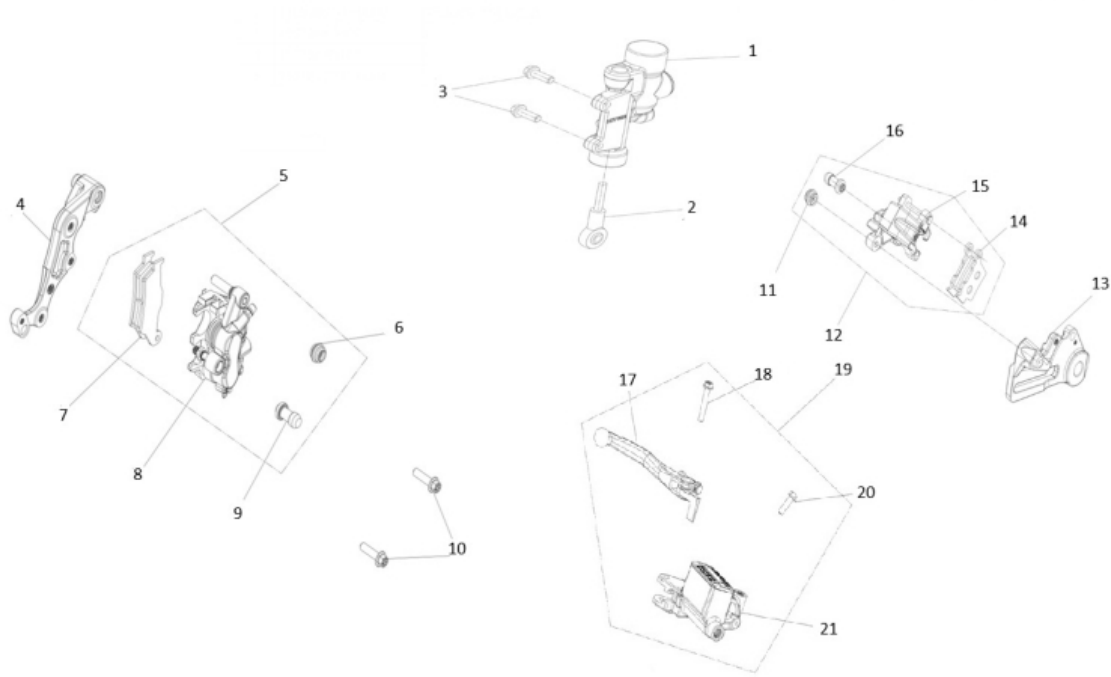

- | | |
|----|---|
| 1 | ● REAR BRAKE MASTER CYLINDER
0/000.860.4709 (u. 1) |
| 2 | ● BRAKE ROD BALL JOINT
0/000.460.4780 (u. 1) |
| 3 | ● SCREW M6x16
0/000.460.4720 (u. 2) |
| 4 | ● FRONT CALIPER BRACKET
0/000.980.4706 (u. 1) |
| 5 | ● FRONT CALIPER ASSY
0/000.860.4705 (u. 1) |
| 6 | ● DUST CAP
0/000.410.4707 (u. 1) |
| 7 | ● FRONT BRAKE PADS (1KIT)
0/000.930.4701 (u. 1) |
| 8 | ● FRONT CALIPER
0/000.860.4706 (u. 1) |
| 9 | ● LOWER DUST CAP
0/000.410.4708 (u. 1) |
| 10 | ● HEX BOLT M8x30
0/000.460.4726 (u. 2) |
| 11 | ● DUST CAP
0/000.410.4709 (u. 1) |
| 12 | ● REAR CALIPER ASSY
0/000.860.4707 (u. 1) |
| 13 | ● REAR CALIPER BRACKET
0/000.980.4707 (u. 1) |
| 14 | ● REAR BRAKE PADS (1KIT)
0/000.930.4702 (u. 1) |


15	● REAR CALIPER 0/000.860.4708 (u. 1)
16	● LOWER DUST CAP 0/000.410.4710 (u. 1)
17	● FRONT BRAKE LEVER 0/000.830.4701 (u. 1)
18	● SCREW M6x35 0/000.460.4722 (u. 1)
19	● FRONT BRAKE PUMP ASSY 0/000.860.4703 (u. 1)
20	● SCREW M6x20 0/000.460.4721 (u. 1)
21	● FRONT BRAKE PUMP 0/000.860.4704 (u. 1)

 ABS ASSY.

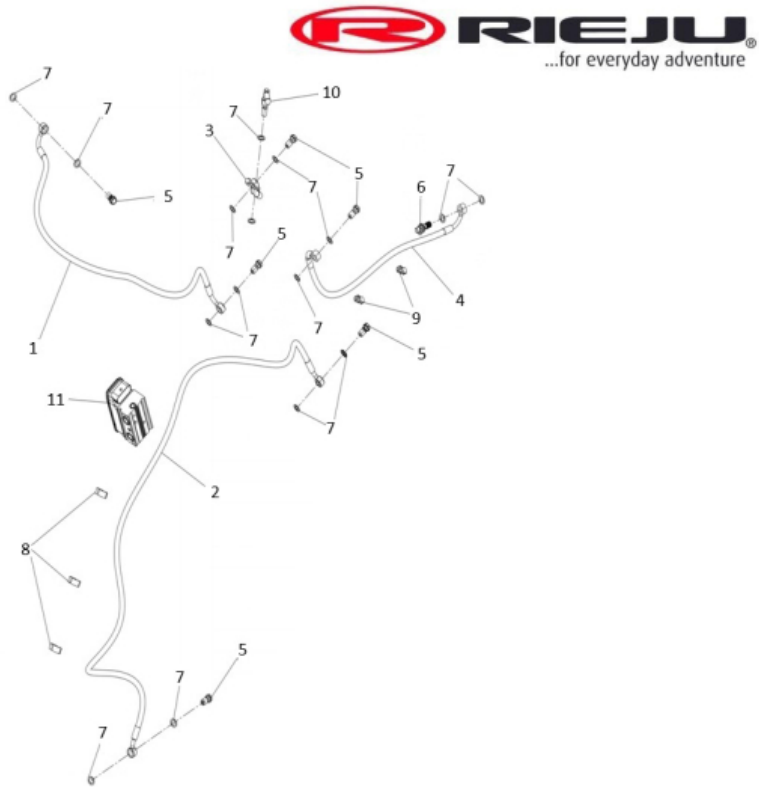


- | | |
|----|--|
| 1 | ● FRONT PUMP TO ABS HOSE
0/000.290.4715 (u. 1) |
| 2 | ● ABS TO FRONT CALIPER HOSE
0/000.290.4716 (u. 1) |
| 3 | ● REAR BRAKE FITTING
0/000.460.4786 (u. 1) |
| 4 | ● ABS TO REAR CALIPER HOSE
0/000.290.4717 (u. 1) |
| 5 | ● BRAKE SYSTEM SCREW
0/000.460.4778 (u. 6) |
| 6 | ● BLEED SCREW
0/000.460.4779 (u. 1) |
| 7 | ● BRAKE COPPER WASHER
0/000.440.4731 (u. 16) |
| 8 | ● BRAKE CABLE CLIP
0/000.680.4709 (u. 3) |
| 9 | ● BRAKE CABLE CLIP 2
0/000.680.4708 (u. 2) |
| 10 | ● REAR BRAKE SWITCH
0/000.720.4701 (u. 1) |
| 11 | ● ABS MODULE
0/000.820.4701 (u. 1) |

 REAR WHEEL

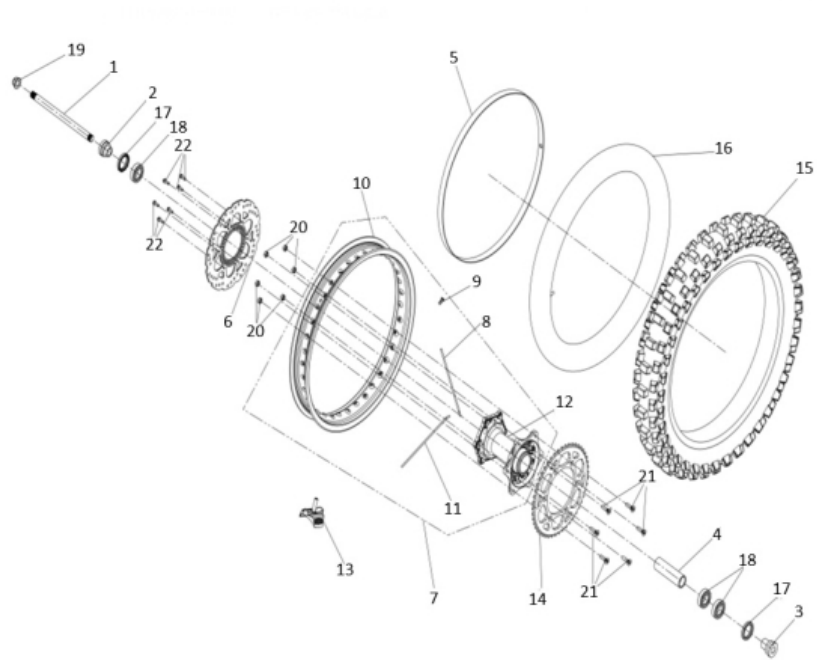

1	● REAR WHEEL AXLE 0/000.190.4706 (u. 1)
2	● REAR WHEEL SPACER RH 0/000.480.4717 (u. 1)
3	● REAR WHEEL SPACER LH 0/000.480.4718 (u. 1)
4	● CENTRAL REAR WHEEL SPACER 0/000.480.4719 (u. 1)
5	● REAR TYRE PROTECTOR 0/000.220.4710 (u. 1)
6	● REAR BRAKE DISC 0/001.090.4702 (u. 1)
7	● COMPLETE REAR WHEEL 0/000.230.4703 (u. 1)
8	● REAR WHEEL OUTER SPOKE 0/000.540.4703 (u. 18)
9	● REAR WHEEL SPOKE NIPPLE 0/000.340.4722 (u. 36)
10	● REAR WHEEL RIM 0/000.230.4704 (u. 1)
11	● REAR WHEEL INNER SPOKE 0/000.540.4704 (u. 18)
12	● REAR WHEEL HUB 0/000.070.4702 (u. 1)
13	● REAR TUBE LOCK 0/000.220.4711 (u. 1)
14	● REAR SPROCKET Z46 0/000.500.4702 (u. 1)


15	● REAR TYRE 120/80-18 0/000.510.4702 (u. 1)
16	● REAR WHEEL INNER TUBE 0/000.520.4702 (u. 1)
17	● WHEEL OIL SEAL 0/000.890.4709 (u. 2)
18	● WHEEL BEARING 0/000.960.4715 (u. 3)
19	● SELF-LOCKING NUT M16 0/000.340.4717 (u. 1)
20	● NUT M8 0/000.340.4711 (u. 6)
21	● TORNILLO ALLEN M8x33 0/000.460.4706 (u. 6)
22	● SCREW M6x20 0/000.460.4721 (u. 6)

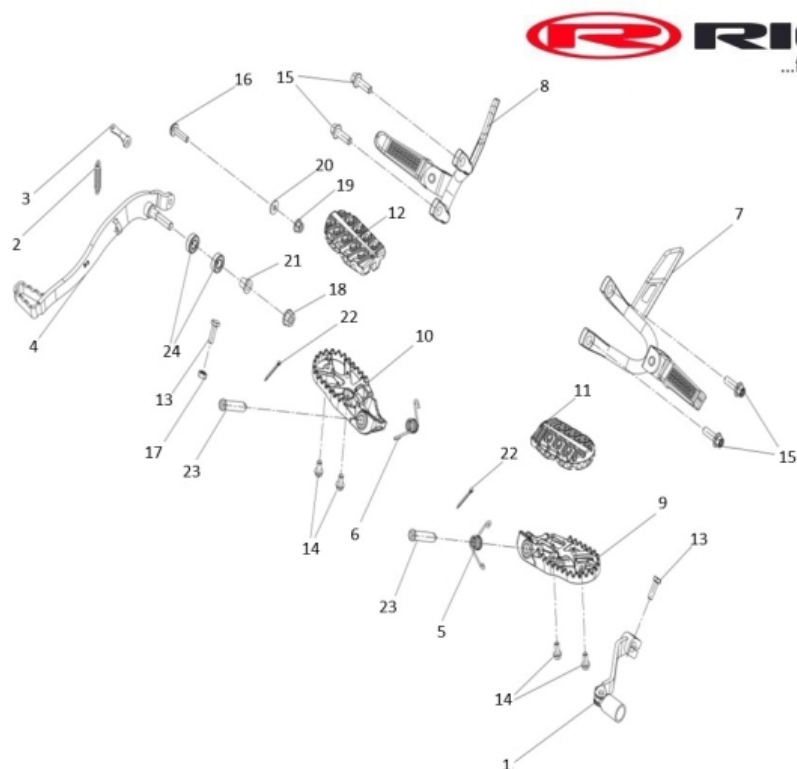 FOOTREST - LEVERS


1	- GEAR SHIFT LEVER 0/005.430.4702 (u. 1)
2	- BRAKE PEDAL RETURN SPRING 0/000.470.4711 (u. 1)
3	- BRAKE PEDAL RETURN BRACKET 0/000.980.4705 (u. 1)
4	- BRAKE PEDAL 0/000.730.4701 (u. 1)
5	- FOOTREST SPRING RH 0/000.470.4712 (u. 1)
6	- FOOTREST SPRING LH 0/000.470.4713 (u. 1)
7	- PASSENGER FOOTREST BRACKET + FOOTREST LH 0/000.740.4701 (u. 1)
8	- PASSENGER FOOTREST BRACKET + FOOTREST RH 0/000.740.4702 (u. 1)
9	- FOOTREST LH 0/000.740.4703 (u. 1)
10	- FOOTREST RH 0/000.740.4704 (u. 1)
11	- FOOTREST RUBBER LH 0/000.360.4708 (u. 1)
12	- FOOTREST RUBBER RH 0/000.360.4709 (u. 1)
13	- SCREW M6x20 0/000.460.4707 (u. 2)
14	- SCREW M6x12 0/000.460.4719 (u. 4)


15	 HEX BOLT M8x25 0/000.460.4725 (u. 4)
16	 TONILLO ALLEN M6x25 0/000.460.4716 (u. 4)
17	 NUT M6 0/000.340.4701 (u. 1)
18	 NUT M8 0/000.340.4706 (u. 1)
19	 NUT M6 0/000.340.4710 (u. 1)
20	 WASHER Ø6xØ15 0/000.440.4707 (u. 1)
21	 BUSHING BRAKE PEDAL 0/000.480.4705 (u. 1)
22	 FOOTREST AXLE LOCK PIN 0/000.240.4701 (u. 2)
23	 FOOTREST AXLE 0/000.190.4701 (u. 2)
24	 BRAKE PEDAL BEARING 0/000.960.4716 (u. 2)

 SIDE STAND

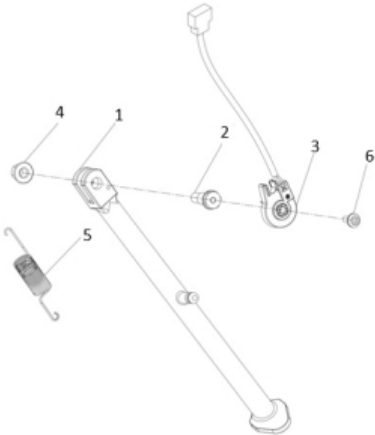

- | | |
|---|--|
| 1 |  SIDE STAND
0/000.210.4701 (u. 1) |
| 2 |  SIDE STAND BOLT
0/000.460.4783 (u. 1) |
| 3 |  SIDE STAND SENSOR
0/001.010.4706 (u. 1) |
| 4 |  NUT M10x1,25
0/000.340.4714 (u. 1) |
| 5 |  SIDE STAND SPRING
0/000.470.4714 (u. 1) |
| 6 |  SIDE STAND SENSOR BOLT
0/000.460.4715 (u. 1) |

 
REAR MUDGUARD - LICENSE PLATE LIGHT - REAR TURN SIGNAL ASSY.

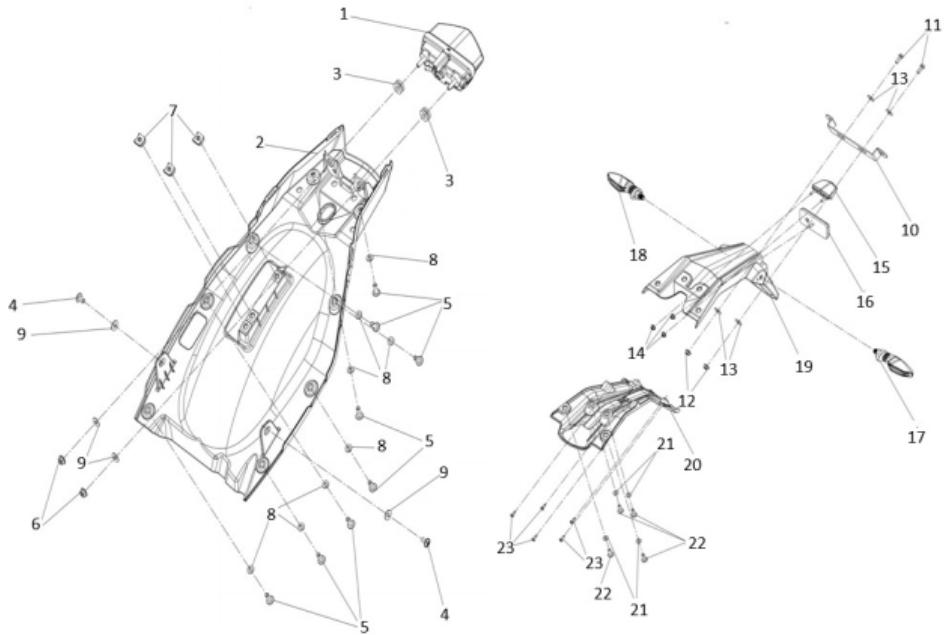

1	● REAR LIGHT 0/000.150.4701 (u. 1)
2	● REAR INNER FENDER 0/000.570.4702 (u. 1)
3	● REAR LIGHT SILENTBLOCK 0/000.360.4718 (u. 2)
4	● SCREW ISO 7380 Torx T-30 WITH WASHER M6x12 STAINLESS STEEL 0/000.460.0044 (u. 2)
	● BOLT WITH WASHER M6x12 0/000.460.4717 (u. 2)
5	● TORX SCREW WITH WASHER M6x16 0/000.460.4718 (u. 8)
6	● NUT M6 0/000.340.4702 (u. 2)
7	● QUICK NUT M6 0/000.340.4718 (u. 3)
8	● NYLON WASHER M6 0/000.440.4709 (u. 8)
9	● FLAT WASHER M6 0/000.440.4706 (u. 4)
10	● LICENSE PLATE BRACKET 0/000.980.4708 (u. 1)
11	● SCREW M6x16 0/000.460.4720 (u. 2)
12	● M6 NUT WITH TOOTHED WASHER 0/000.340.4705 (u. 2)
13	● WASHER M6 0/000.440.4704 (u. 4)


14	 NUT M6 0/000.340.4704 (u. 3)
15	 LICENSE PLATE LIGHT 0/000.150.4703 (u. 1)
16	 REAR REFLECTOR 0/000.630.4702 (u. 1)
17	 REAR LH INDICATOR 0/000.150.4706 (u. 1)
18	 REAR RH INDICATOR 0/000.150.4707 (u. 1)
19	 REAR FENDER LICENSE PLATE HOLDER 0/000.060.4701 (u. 1)
20	 REAR INNER FENDER 0/000.060.4702 (u. 1)
21	 NYLON WASHER M6 0/000.440.4709 (u. 4)
22	 TORX SCREW WITH WASHER M6x16 0/000.460.4718 (u. 4)
23	 PLASTIC THREAD SCREW 4.2x13 0/000.460.4733 (u. 5)

 FRONT HEADLIGHT

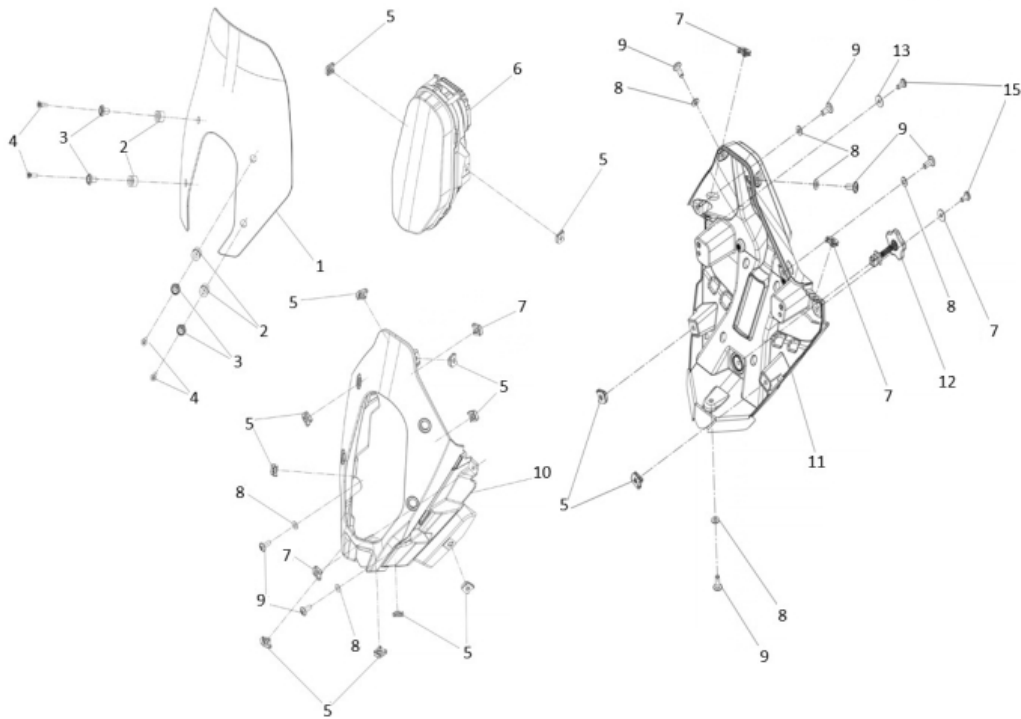

- | | |
|----|--|
| 1 | WINDSHIELD SCREEN
0/000.570.4706 (u. 1) |
| 2 | WINDSHIELD SCREEN SILENTBLOCK
0/000.360.4714 (u. 4) |
| 3 | WINDSHIELD SCREEN BUSHING
0/000.480.4708 (u. 4) |
| 4 | TORNILLO M6x26
0/000.460.4705 (u. 4) |
| 5 | QUICK NUT M6
0/000.340.4718 (u. 13) |
| 6 | FRONT HEADLIGHT
0/000.150.4702 (u. 1) |
| 7 | QUICK NUT M5
0/000.340.4709 (u. 4) |
| 8 | NYLON WASHER M6
0/000.440.4709 (u. 7) |
| 9 | TORX SCREW WITH WASHER M6x16
0/000.460.4718 (u. 7) |
| 10 | FRONT HEADLIGHT BRACKET
0/000.620.4702 (u. 1) |
| 11 | INNER FRONT HEADLIGHT BRACKET
0/000.620.4701 (u. 1) |
| 12 | HEADLIGHT ADJUSTMENT SCREW
0/000.460.4782 (u. 1) |
| 13 | WASHER M5
0/000.440.4701 (u. 2) |
| 15 | TORNILLO TORX. M5x12
0/000.460.4714 (u. 2) |

 
COOLING SYSTEM - EXHAUST

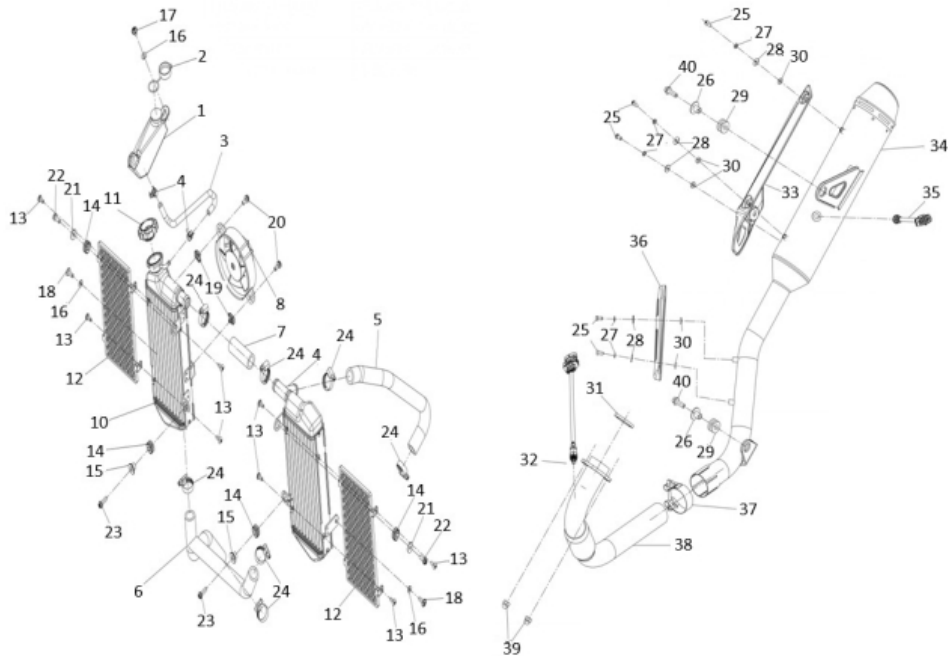

- | | |
|----|---|
| 1 | ● COOLANT RESERVOIR
0/000.030.4701 (u. 1) |
| 2 | ● RESERVOIR CAP
0/000.410.4705 (u. 1) |
| 3 | ● RESERVOIR TO RADIATOR HOSE
0/000.290.4707 (u. 1) |
| 4 | ● RUBBER HOSE CLAMP
0/000.680.4713 (u. 2) |
| 5 | ● RADIATOR HOSE 1
0/000.290.4704 (u. 1) |
| 6 | ● RADIATOR HOSE 2
0/000.290.4705 (u. 1) |
| 7 | ● RADIATOR CONNECTION HOSE
0/000.290.4706 (u. 1) |
| 8 | ● COOLING FAN
0/005.060.4701 (u. 1) |
| 9 | ● LH RADIATOR
0/000.580.4701 (u. 1) |
| 10 | ● RH RADIATOR
0/000.580.4702 (u. 1) |
| 11 | ● RADIATOR CAP
0/000.410.4706 (u. 1) |
| 12 | ● RADIATOR GUARD
0/000.220.4718 (u. 2) |
| 13 | ● SCREW M5x8
0/000.460.4776 (u. 8) |
| 14 | ● RADIATOR SILENTBLOCK
0/000.360.4704 (u. 4) |

15	 BUSHING 0/000.480.4702 (u. 2)
16	 NYLON WASHER M6 0/000.440.4709 (u. 3)
17	 BOLT WITH WASHER M6x12 0/000.460.4717 (u. 1)
	 SCREW ISO 7380 Torx T-30 WITH WASHER M6x12 STAINLESS STEEL 0/000.460.0044 (u. 1)
18	 TORX SCREW WITH WASHER M6x16 0/000.460.4718 (u. 2)
19	 QUICK NUT M6 0/000.340.4718 (u. 2)
20	 BOLT M6x16 0/000.460.4712 (u. 2)
21	 WASHER M6 0/000.440.4704 (u. 2)
22	 SCREW M6x16 0/000.460.4720 (u. 2)
23	 SCREW M6x20 0/000.460.4721 (u. 2)
24	 ABRAZADERA Ø30 0/000.680.4717 (u. 7)
25	 HEX BOLT M6x12 0/000.460.4732 (u. 5)
26	 EXHAUST BUSHING 0/000.480.4711 (u. 2)
27	 SPRING WASHER Ø6 0/000.440.4708 (u. 5)
28	 WASHER Ø6xØ16 0/000.440.4702 (u. 5)
29	 EXHAUST SILENTBLOCK 0/000.360.4702 (u. 2)
30	 THERMAL GASKET D6XD17X3MM 0/000.360.2007 (u. 1)
31	 EXHAUST GASKET 0/000.490.4711 (u. 1)
32	 LAMBDA SENSOR 0/001.010.4701 (u. 2)
33	 MUFFLER GUARD 0/000.220.4705 (u. 1)
34	 MUFFLER 0/000.870.4700 (u. 1)
36	 EXHAUST GUARD 0/000.220.4704 (u. 1)
37	 EXHAUST CLAMP 0/000.680.4719 (u. 1)
38	 EXHAUST PIPE RALLY 307 0/000.290.4700 (u. 1)
39	 HEX BOLT M8x25 0/000.460.4725 (u. 2)
40	 HEX BOLT M8x25 0/000.460.4725 (u. 2)

 FUEL TANK

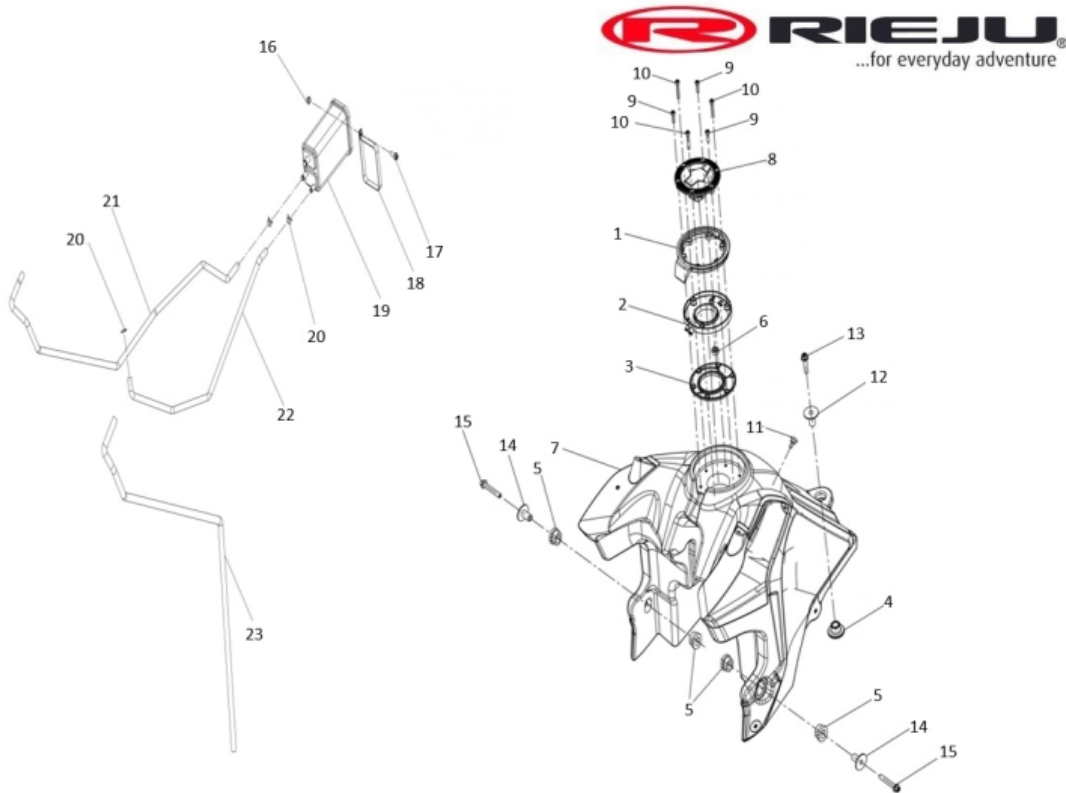

1 FUEL TANK CAP GASKET
0/000.490.4721 (u. 1)

2 FUEL TANK OVERFLOW
0/000.570.4701 (u. 1)

3 FUEL TANK LOCK BRACKET
0/000.980.4722 (u. 1)

4 FUEL TANK SILENTBLOCK 2
0/000.360.4711 (u. 1)

5 FUEL TANK SILENTBLOCK 3
0/000.360.4712 (u. 4)

6 FUEL TANK SILENTBLOCK 4
0/000.360.4713 (u. 1)

7 FUEL TANK
0/000.030.4702 (u. 1)

9 BOLT M5x20
0/000.460.4709 (u. 3)

10 BOLT M5x40
0/000.460.4710 (u. 3)

11 SCREW M6x10
0/000.460.4731 (u. 1)

12 FUEL TANK BUSHING
0/000.480.4706 (u. 1)


13 HEX BOLT M8x35
0/000.460.4727 (u. 1)

14 FUEL TANK BUSHING 2
0/000.480.4707 (u. 2)

15 HEX BOLT M8x50
0/000.460.4728 (u. 2)

16	●	CANISTER BRACKET NUT 0/000.340.4724 (u. 1)
17	●	SCREW M6x16 0/000.460.4720 (u. 1)
18	●	SOPORTE CANISTER 0/000.980.4723 (u. 1)
19	●	CANISTER VALVE 0/000.640.4704 (u. 1)
20	●	CLAMP Ø10 0/000.680.4701 (u. 3)
21	●	CANISTER HOSE 2 0/000.290.4722 (u. 1)
22	●	CANISTER HOSE 1 0/000.290.4721 (u. 1)
23	●	CANISTER HOSE 3 0/000.290.4724 (u. 1)

 FUEL PUMP ASSY. - SET OF LOCKS

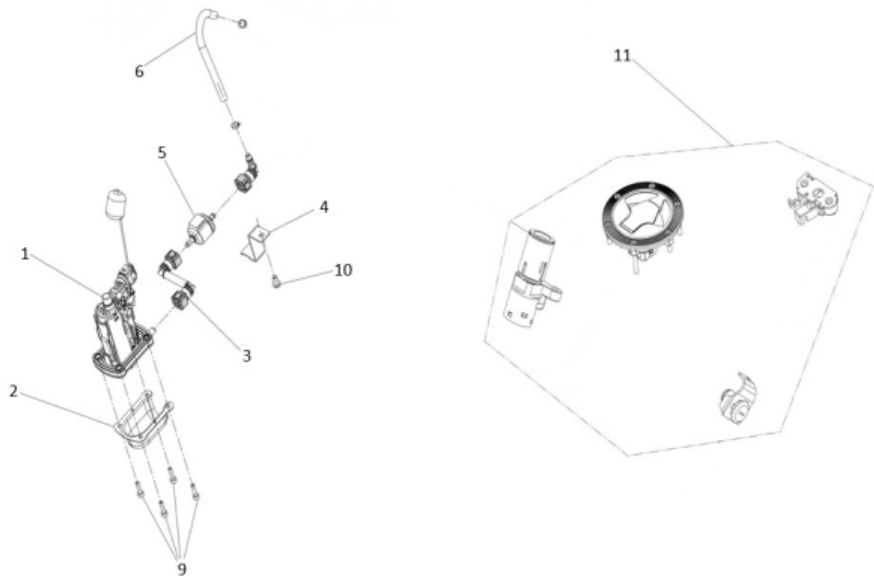

1 FUEL PUMP
0/000.860.4702 (u. 1)

2 FUEL PUMP COVER
0/000.350.4710 (u. 1)

3 HOSE FUEL PUMP TO FILTER
0/000.290.4720 (u. 1)

4 FUEL HOSE BRACKET
0/000.980.4724 (u. 1)

5 FUEL FILTER
0/001.070.4704 (u. 1)

 
6 FUEL HOSE 1
0/000.290.4719 (u. 1)

9 BOLT M5x20
0/000.460.4709 (u. 4)

10 SCREW M6x12
0/000.460.4719 (u. 1)


11 COMPLETE LOCK SET
0/001.060.4701 (u. 1)

FUEL TANK COVERS

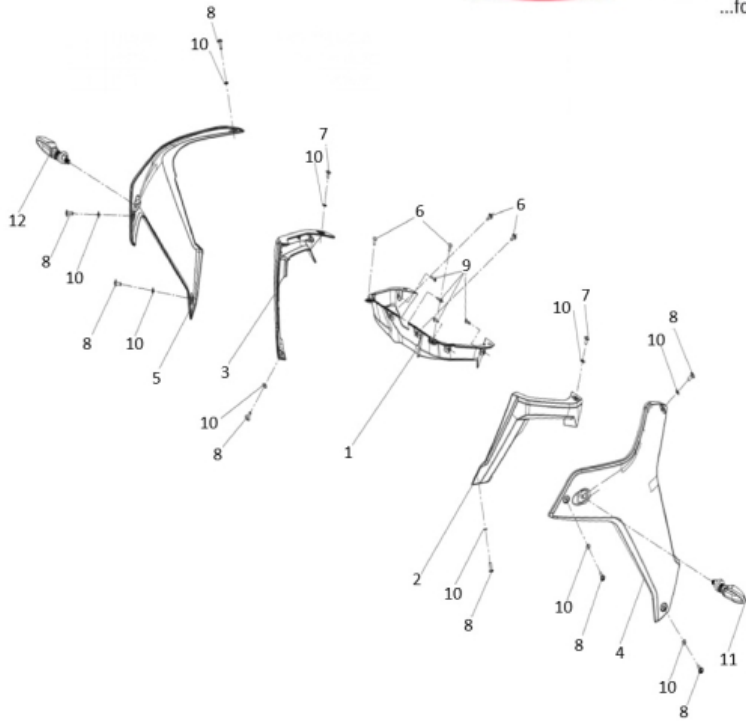


1	FRONT COVER 0/000.570.4711 (u. 1)
2	FRONT LEFT SIDE TRIM 0/000.570.4707 (u. 1)
3	FRONT RIGHT SIDE TRIM 0/000.570.4708 (u. 1)
4	FRONT LEFT SIDE COVER 0/000.570.4709 (u. 1)
5	FRONT RIGHT SIDE COVER 0/000.570.4710 (u. 1)
6	TORNILLO TORX. M5x12 0/000.460.4714 (u. 4)
7	BOLT WITH WASHER M6x12 0/000.460.4717 (u. 2)
	SCREW ISO 7380 Torx T-30 WITH WASHER M6x12 STAINLESS STEEL 0/000.460.0044 (u. 2)
8	TORX SCREW WITH WASHER M6x16 0/000.460.4718 (u. 8)
9	PLASTIC THREAD SCREW 4.2x16 0/000.460.4734 (u. 4)
10	NYLON WASHER M6 0/000.440.4709 (u. 10)
11	FRONT LEFT INDICATOR 0/000.150.4704 (u. 1)
12	FRONT RIGHT INDICATOR 0/000.150.4705 (u. 1)

 BODY SIDE COVER COMPONENTS

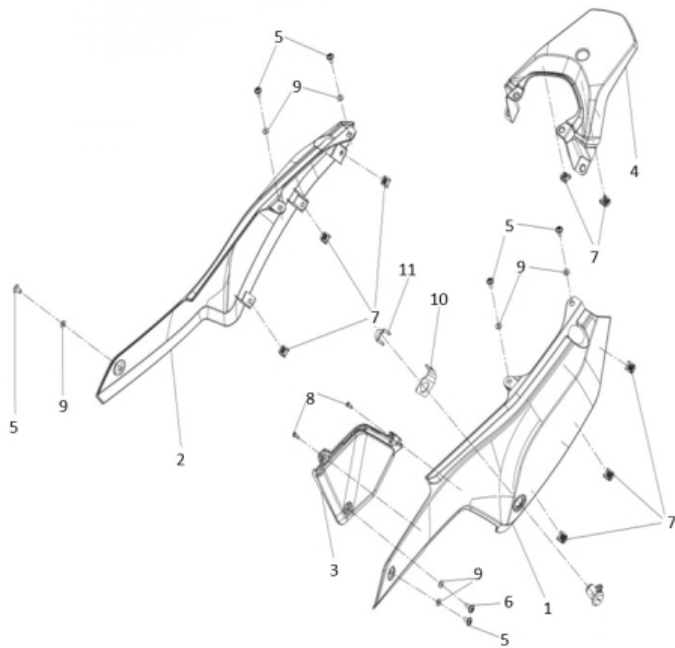


1	● REAR LEFT SIDE COVER 0/000.570.4703 (u. 1)
2	● REAR RIGHT SIDE COVER 0/000.570.4704 (u. 1)
3	● CENTER LEFT TRIM 0/000.570.4705 (u. 1)
4	● REAR UPPER FENDER 0/000.060.4703 (u. 1)
5	● SCREW ISO 7380 Torx T-30 WITH WASHER M6x12 STAINLESS STEEL 0/000.460.0044 (u. 6) ● BOLT WITH WASHER M6x12 0/000.460.4717 (u. 6)
6	● TORX SCREW WITH WASHER M6x16 0/000.460.4718 (u. 1)
7	● QUICK NUT M6 0/000.340.4718 (u. 8)
8	● PLASTIC THREAD SCREW 4.2x13 0/000.460.4733 (u. 2)
9	● NYLON WASHER M6 0/000.440.4709 (u. 7)
10	● SEAT LOCK BRACKET 0/000.980.4727 (u. 1)
11	● SEAT LOCK SPRING PLATE 0/000.470.4715 (u. 1)

 ENGINE PROTECTOR

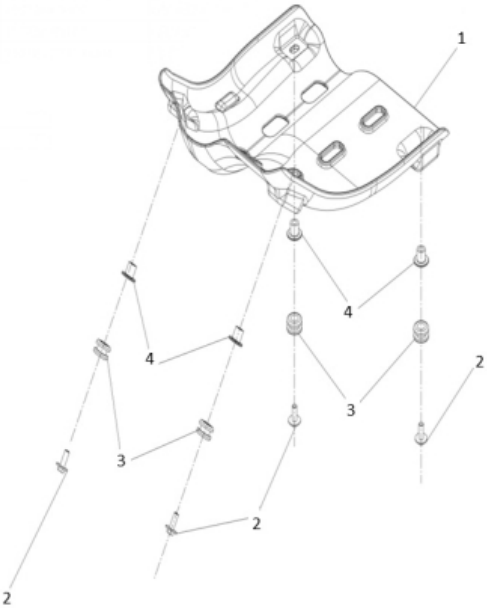

- | | |
|---|---|
| 1 |  ENGINE SKID PLATE
0/000.220.4720 (u. 1) |
| 2 |  SCREW M6x20
0/000.460.4730 (u. 4)
 HEXAGONAL FLANGE SCREW DIN 6921 TX30 M6x20 GRADE 10.9 GEOMET
0/000.460.9181 (u. 4) |
| 3 |  ENGINE SKID PLATE SILENTBLOCK
0/000.360.4715 (u. 4) |
| 4 |  ENGINE SKID PLATE BUSHING
0/000.480.4703 (u. 4) |

 BATTERY - ELECTRICAL WIRING

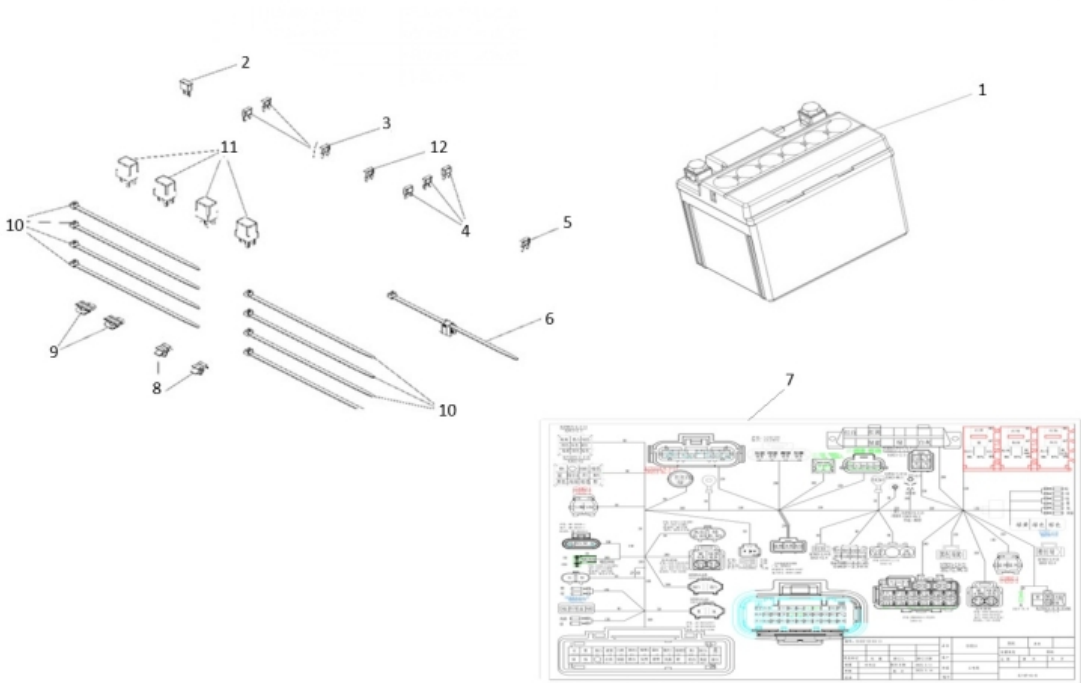

1 BATTERY
0/000.900.4701 (u. 1)

2 FUSE DIODE
0/001.200.4703 (u. 1)

3 25A FUSE
0/000.910.4704 (u. 1)

4 15A FUSE
0/000.910.4702 (u. 3)

5 30A FUSE
0/000.910.4705 (u. 1)

10A FUSE
0/000.910.4701 (u. 1)

6 NYLON CLAMP
0/000.680.4720 (u. 1)

7 MAIN WIRING HARNESS
0/000.160.4701 (u. 1)

8 SPEED SENSOR CABLE CLIP
0/000.680.4705 (u. 1)

 
9 LAMBDA SENSOR SEAL CLIP
0/000.680.4704 (u. 1)

10 NYLON CLAMP
0/000.680.4714 (u. 8)

11 RELAY
0/001.200.4704 (u. 4)


12 20A FUSE
0/000.910.4703 (u. 1)

SEAT - REAR HANDLE

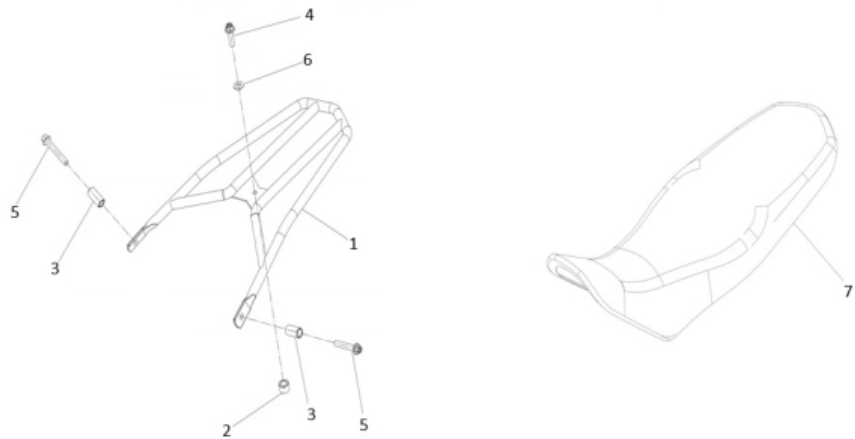

- | | |
|---|---|
| 1 | ● GRAB HANDLE
0/000.980.4721 (u. 1) |
| 2 | ● GRAB HANDLE SPACER
0/000.480.4731 (u. 1) |
| 3 | ● LATERAL GRAB HANDLE SPACER
0/000.480.4732 (u. 2) |
| 4 | ● HEX BOLT M8x30
0/000.460.4726 (u. 1) |
| 5 | ● HEX BOLT M8x50
0/000.460.4728 (u. 2) |
| 6 | ● FLAT WASHER M8
0/000.440.4705 (u. 1) |
| 7 | ● SEAT
0/000.040.4701 (u. 1) |

 ELECTRICAL COMPONENTS

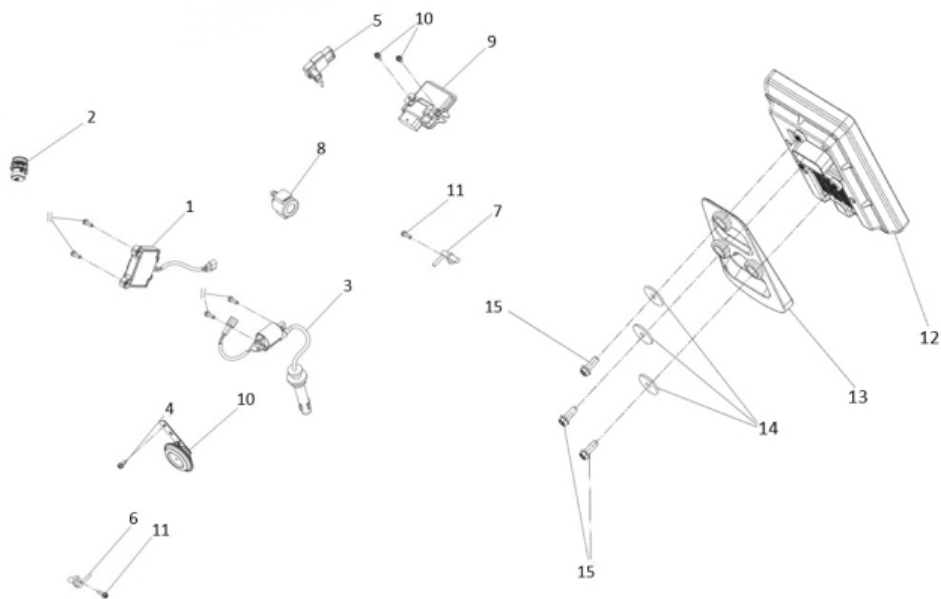

1	 VOLTAGE REGULATOR 0/001.200.4701 (u. 1)
2	 USB CHARGING PORT 0/001.200.4702 (u. 1)
3	 IGNITION COIL 0/005.070.4705 (u. 1)
5	 FLASHER RELAY 0/001.200.4705 (u. 1)
6	 FRONT WHEEL ABS SENSOR 0/001.010.4704 (u. 1)
7	 REAR WHEEL ABS SENSOR 0/001.010.4705 (u. 1)
8	 STARTER RELAY 0/001.200.4706 (u. 1)
9	 RALLY 307 ECU 0/005.705.4701 (u. 1)
10	 BOLT M6x16 0/000.460.4712 (u. 3)
11	 SCREW M6x16 0/000.460.4720 (u. 1)
12	 DASHBOARD 0/001.000.4701 (u. 1)
13	 SCREEN ANTI-VIBRATION RUBBER 0/000.360.4717 (u. 1)
14	 FLAT WASHER M6 0/000.440.4703 (u. 3)
15	 SCREW M6x16 0/000.460.4720 (u. 3)

DECAL SET

 


1

SET OF AVENTURA RALLY 307 DECALS
0/000.390.4700 (u. 1)

YF300F AVENTURA 307 RALLY


CYLINDER HEAD

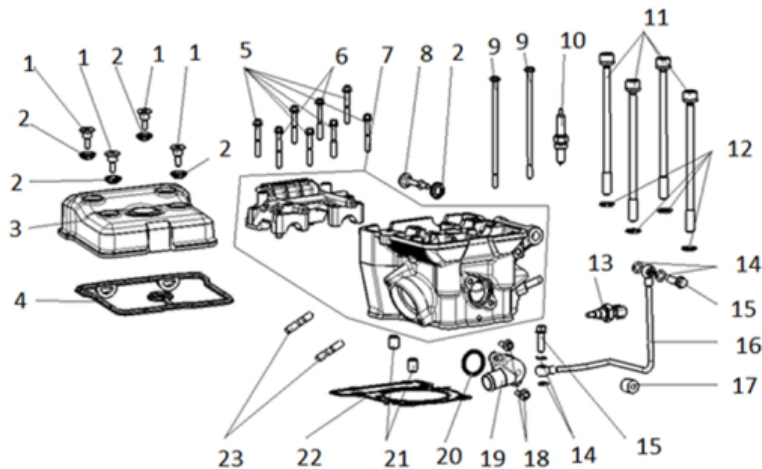

1	CYLINDER HEAD COVER SCREW M6 0/000.460.4774 (u. 4)
2	CYLINDER HEAD COVER SCREW GASKET 0/000.490.4720 (u. 5)
3	RALLY 307 CYLINDER HEAD COVER 0/000.350.4705 (u. 1)
4	CYLINDER HEAD COVER GASKET 0/000.490.4707 (u. 1)
5	SCREW M6x40 0/000.460.4752 (u. 6)
6	SCREW M6x45 0/000.460.4760 (u. 2)
7	RALLY 307 CYLINDER HEAD 0/005.770.4701 (u. 1)
8	SCREW M6x14 0/000.460.4775 (u. 1)
9	SCREW M6x135 0/000.460.4769 (u. 2)
10	SPARK PLUG 0/005.110.4701 (u. 1)
11	SCREW M10x165 0/000.460.4773 (u. 4)
12	FLAT WASHER Ø8xØ10 0/000.440.4726 (u. 4)
13	ENGINE TEMPERATURE SENSOR 0/001.010.4703 (u. 1)
14	FLAT WASHER Ø8xØ14 0/000.440.4716 (u. 4)


15	● SCREW M8x20 0/000.460.4768 (u. 2)
16	● ENGINE OIL HOSE 0/000.290.4710 (u. 1)
17	● ENGINE TUBE BEARING 0/000.960.4702 (u. 1)
18	● SCREW M6x16 0/000.460.4749 (u. 2)
19	● TUBE TO ENGINE CONNECTOR 0/000.290.4713 (u. 1)
20	● O-RING 0/000.490.4717 (u. 1)
21	● DOWEL PIN 0/000.240.4708 (u. 2)
22	● CYLINDER HEAD GASKET 0/000.490.4706 (u. 1)
23	● DOUBLE STUD M8x28 0/000.460.4771 (u. 2)

 CYLINDER

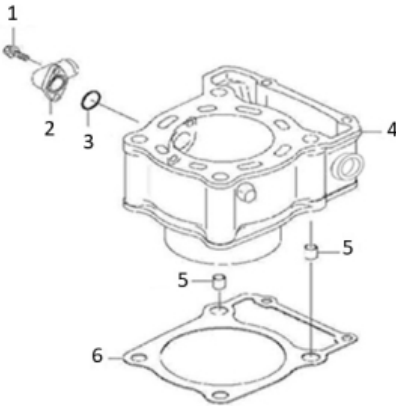

- | | |
|---|--|
| 1 | ● SCREW M6x16
0/000.460.4749 (u. 2) |
| 2 | ● TUBE TO CYLINDER CONNECTOR
0/000.290.4714 (u. 1) |
| 3 | ● O-RING TUBE TO CYLINDER CONNECTOR
0/000.490.4716 (u. 1) |
| 4 | ● CYLINDER
0/005.190.4701 (u. 1) |
| 5 | ● DOWEL PIN
0/000.240.4708 (u. 2) |
| 6 | ● CYLINDER GASKET
0/000.490.4705 (u. 1) |

 
VALVES - TIMING CHAIN

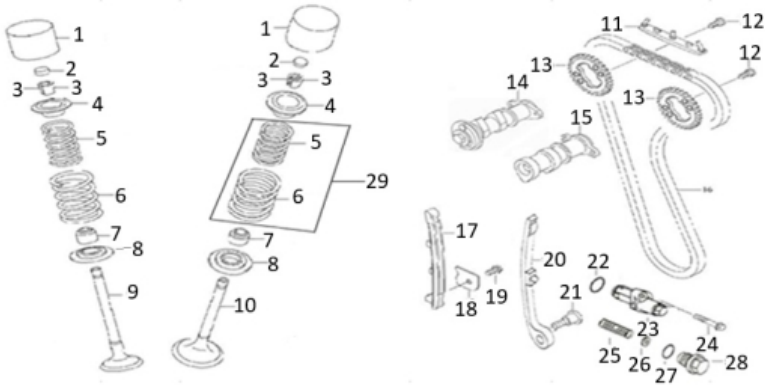

- | | |
|----|--|
| 1 | ● VALVE ADJUSTER BUCKET
0/005.490.4701 (u. 4) |
| 2 | ● VALVE ADJUSTMENT SHIM
0/000.980.4701 (u. 4) |
| 3 | ● VALVE RETAINER CLIP
0/000.240.4703 (u. 8) |
| 4 | ● UPPER VALVE SPRING SEAT
0/000.480.4710 (u. 4) |
| 5 | ● INNER VALVE SPRING
0/000.470.4703 (u. 4) |
| 6 | ● OUTER VALVE SPRING
0/000.470.4704 (u. 4) |
| 7 | ● VALVE STEM OIL SEAL
0/000.890.4701 (u. 4) |
| 8 | ● LOWER VALVE SPRING SEAT
0/000.480.4709 (u. 4) |
| 9 | ● EXHAUST VALVE
0/000.640.4701 (u. 2) |
| 10 | ● INTAKE VALVE
0/000.640.4702 (u. 2) |
| 11 | ● TIMING CHAIN PLATE
0/000.220.4703 (u. 1) |
| 12 | ● SCREW M6x10
0/000.460.4748 (u. 4) |
| 13 | ● TIMING CHAIN SPROCKET
0/000.500.4701 (u. 2) |
| 14 | ● EXHAUST CAMSHAFT
0/005.010.4701 (u. 1) |

15	●	INTAKE CAMSHAFT 0/005.010.4702 (u. 1)
16	●	TIMING CHAIN 0/001.050.4701 (u. 1)
17	●	TIMING CHAIN GUIDE 0/000.710.4702 (u. 1)
18	●	TIMING CHAIN GUIDE BRACKET 0/000.980.4702 (u. 1)
19	●	SCREW M6x16 0/000.460.4749 (u. 1)
20	●	TIMING CHAIN GUIDE 2 0/000.710.4701 (u. 1)
21	●	TIMING CHAIN GUIDE 2 FIXING SCREW 0/000.460.4744 (u. 1)
22	●	TIMING CHAIN TENSIONER O-RING 0/000.490.4715 (u. 1)
23	●	TIMING CHAIN TENSIONER 0/000.380.4701 (u. 1)
24	●	SCREW M6x25 0/000.460.4751 (u. 2)
25	●	TIMING CHAIN TENSIONER SPRING 0/000.470.4708 (u. 1)
26	●	WASHER Ø6xØ14 0/000.440.4719 (u. 1)
27	●	TENSIONER SCREW O-RING 0/000.490.4719 (u. 1)
28	●	TENSIONER SCREW 0/000.460.4745 (u. 1)
29	●	VALVE SPRING SET 0/000.470.4702 (u. 4)

 CARTER

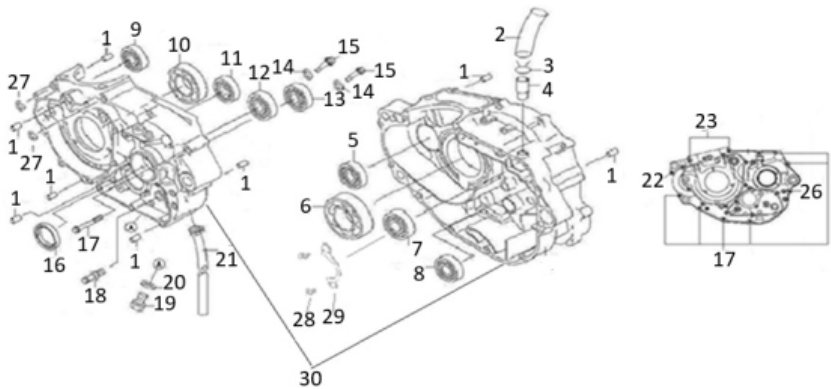

1  CRANKCASE JOINT DOWEL PIN
0/000.240.4707 (u. 8)

2  AIR HOSE
0/000.290.4708 (u. 1)

3  AIR HOSE CLAMP
0/000.680.4706 (u. 1)

4  TUBE TO ENGINE CONNECTOR 2
0/000.290.4712 (u. 1)

5  BEARING 1
0/000.960.4706 (u. 1)

6  BEARING 2
0/000.960.4707 (u. 1)

7  BEARING 4
0/000.960.4709 (u. 1)

8  BEARING 5
0/000.960.4710 (u. 1)

9  BEARING 1
0/000.960.4706 (u. 1)

10  BEARING 3
0/000.960.4708 (u. 1)

11  BEARING 6
0/000.960.4711 (u. 1)


12  BEARING 7
0/000.960.4712 (u. 1)

13  BEARING 8
0/000.960.4704 (u. 1)

14  WASHER Ø6xØ14
0/000.440.4719 (u. 2)

15	● SCREW M6x14 0/000.460.4761 (u. 2)
16	● OIL SEAL 2 0/000.890.4704 (u. 1)
17	● SCREW M6x50 0/000.460.4754 (u. 6)
18	● SCREW M10x38 0/000.460.4747 (u. 1)
19	● OIL DRAIN SCREW 0/000.460.4743 (u. 1)
20	● OIL DRAIN SCREW WASHER 0/000.440.4713 (u. 1)
21	● OIL HOSE 2 0/000.290.4709 (u. 1)
22	● SCREW M6x35 0/000.460.4755 (u. 1)
23	● SCREW M6x70 0/000.460.4764 (u. 2)
26	● SCREW M6x60 0/000.460.4756 (u. 1)
27	● WASHER Ø6xØ12 0/000.440.4718 (u. 2)
29	● BEARING RETAINER PLATE 0/000.220.4707 (u. 1)
30	● RALLY 307 CRANKCASE SET 0/005.700.4701 (u. 1)


 
CLUTCH COVER

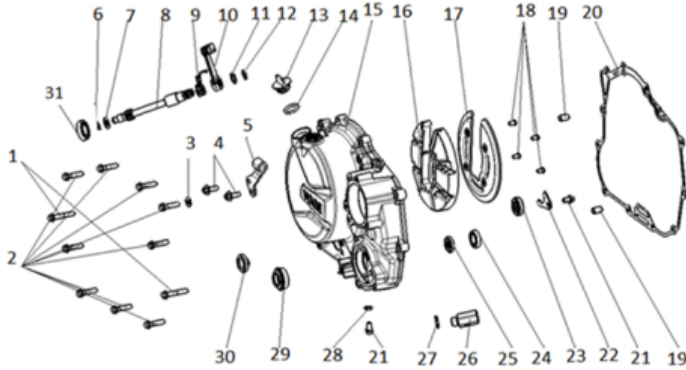

- | | |
|----|--|
| 1 | ● SCREW M6x35
0/000.460.4755 (u. 2) |
| 2 | ● SCREW M6x25
0/000.460.4751 (u. 9) |
| 3 | ● FLAT WASHER Ø6xØ13
0/000.440.4714 (u. 1) |
| 4 | ● SCREW M6x16
0/000.460.4749 (u. 2) |
| 5 | ● CLUTCH CABLE PLATE
0/000.220.4706 (u. 1) |
| 6 | ● CLUTCH SHAFT CIRCLIP
0/000.300.4703 (u. 1) |
| 7 | ● WASHER Ø8xØ15
0/000.440.4728 (u. 1) |
| 8 | ● CLUTCH LEVER SHAFT
0/000.190.4704 (u. 1) |
| 9 | ● CLUTCH LEVER SPRING
0/000.470.4709 (u. 1) |
| 10 | ● CONTROL ARM, CLUTCH
0/005.430.4701 (u. 1) |
| 11 | ● WASHER Ø10xØ16
0/000.440.4727 (u. 1) |
| 12 | ● SNAP RING
0/000.300.4702 (u. 1) |
| 13 | ● OIL FILLER CAP
0/000.410.4704 (u. 1) |
| 14 | ● OIL FILLER CAP GASKET
0/000.490.4714 (u. 1) |

15	●	ENGINE CLUTCH COVER 0/000.350.4703 (u. 1)
16	●	PAD CUSHION 0/000.470.4701 (u. 1)
17	●	COVER CUSHION PAD 0/000.350.4706 (u. 1)
18	●	SCREW M5x8 0/000.460.4776 (u. 4)
19	●	CRANKCASE JOINT DOWEL PIN 0/000.240.4707 (u. 2)
20	●	CLUTCH COVER GASKET 0/000.490.4703 (u. 1)
21	●	SCREW M6x10 0/000.460.4765 (u. 2)
22	●	CLUTCH CABLE PLATE 0/000.220.4706 (u. 1)
23	●	OIL SEAL 4 0/000.890.4706 (u. 1)
24	●	BEARING 0/000.960.4701 (u. 1)
25	●	OIL SEAL 1 0/000.890.4703 (u. 1)
26	●	OIL CONTROL VALVE 0/000.640.4703 (u. 1)
27	●	WASHER Ø12xØ17 0/000.440.4725 (u. 1)
28	●	WASHER Ø6xØ12X1.2 0/000.440.4715 (u. 1)
29	●	HYDROSEAL 0/000.890.4702 (u. 1)
30	●	OIL LEVEL SIGHT GLASS 0/000.410.4703 (u. 1)
31	●	OIL SEAL 5 0/000.890.4707 (u. 1)

  
RIGHT COVER

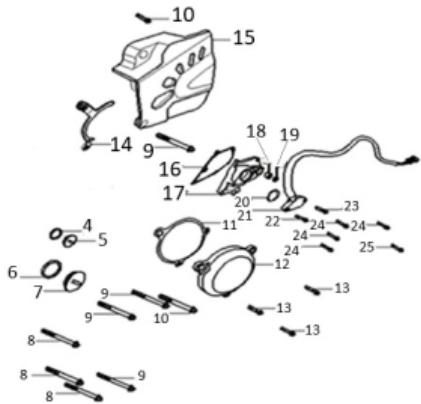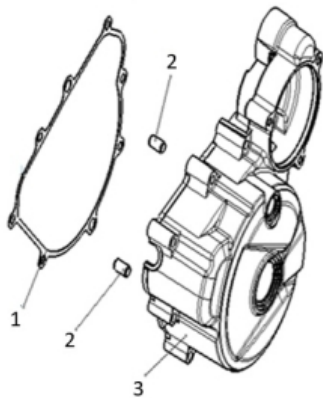

- | | |
|----|--|
| 1 | JUNTA TAPA RH MOTOR
0/000.490.4701 (u. 1) |
| 2 | CRANKCASE JOINT DOWEL PIN
0/000.240.4707 (u. 2) |
| 3 | LEFT ENGINE COVER
0/000.350.4701 (u. 1) |
| 4 | O-RING
0/000.490.4713 (u. 1) |
| 5 | INSPECTION CAP
0/000.410.4702 (u. 1) |
| 6 | O-RING 2
0/000.490.4712 (u. 1) |
| 7 | CAP
0/000.410.4701 (u. 1) |
| 8 | SCREW M6X40
0/000.460.4753 (u. 5) |
| 9 | SCREW M6x45
0/000.460.4759 (u. 2) |
| 10 | SCREW M6x30
0/000.460.4763 (u. 1) |
| 11 | GEAR CHAMBER COVER GASKET
0/000.490.4702 (u. 1) |
| 12 | GEAR CHAMBER COVER
0/000.350.4702 (u. 1) |
| 13 | SCREW M6x20
0/000.460.4750 (u. 3) |
| 14 | SPROCKET GUARD BRACKET
0/000.980.4730 (u. 1) |


15	 CHAIN SPROCKET GUARD 0/000.220.4701 (u. 1)
16	 GEARBOX COVER GASKET 0/000.490.4704 (u. 1)
17	 GEARBOX COVER 0/000.350.4704 (u. 1)
18	 BEARING 0/000.960.4705 (u. 1)
19	 OIL SEAL 3 0/000.890.4705 (u. 1)
20	 O-RING 2 0/000.490.4712 (u. 1)
21	 GEAR SENSOR 0/001.010.4702 (u. 1)
22	 SCREW M6x65 0/000.460.4758 (u. 1)
23	 SCREW M6x25 0/000.460.4751 (u. 3)
24	 SCREW M6x20 0/000.460.4750 (u. 2)
25	 SCREW M6x85 0/000.460.4762 (u. 1)

 CRANKSHAFT - PISTON - BALANCER SHAFT

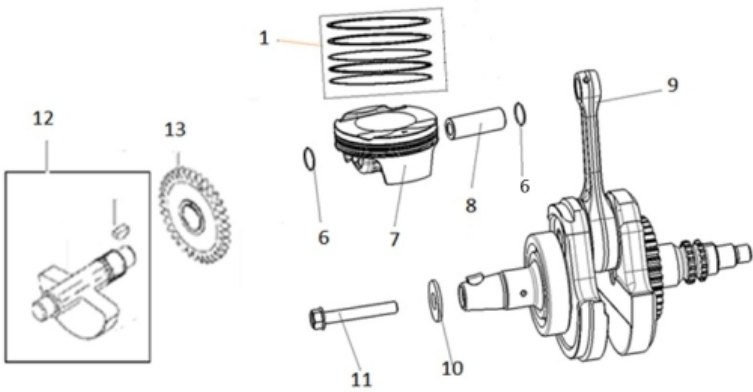


- | | | |
|----|---|--|
| 1 | ● | PISTON RING SET
0/000.240.4702 (u. 1) |
| 6 | ● | PISTON PIN CIRCLIP
0/000.240.4706 (u. 1) |
| 7 | ● | PISTON
0/005.711.4701 (u. 1) |
| 8 | ● | PISTON PIN
0/000.190.4702 (u. 1) |
| 9 | ● | CONNECTING ROD ASSEMBLY
0/005.380.4701 (u. 1) |
| 10 | ● | WASHER Ø12xØ29
0/000.440.4720 (u. 1) |
| 11 | ● | SCREW M12X50
0/000.460.4767 (u. 1) |
| 12 | ● | BALANCER SHAFT
0/000.190.4703 (u. 1) |
| 13 | ● | BALANCER SHAFT GEAR
0/005.400.4710 (u. 1) |

 GEARBOX

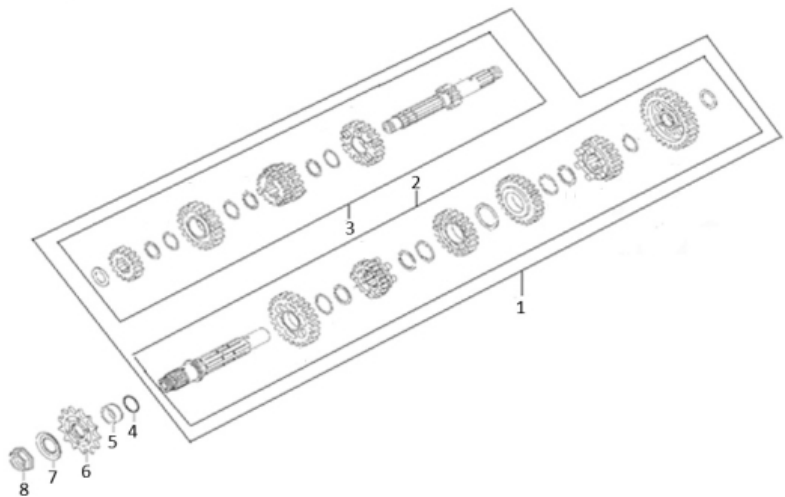


- | | |
|---|---|
| 1 | MAINSHAFT & COUNTERSHAFT KIT
0/005.400.4718 (u. 1) |
| 2 | COUNTERSHAFT ASSEMBLY
0/005.400.4713 (u. 1) |
| 3 | MAINSHAFT ASSEMBLY
0/005.400.4712 (u. 1) |
| 4 | COUNTERSHAFT O RING
0/000.490.4718 (u. 1) |
| 5 | COUNTERSHAFT BUSHING
0/000.480.4713 (u. 1) |
| 6 | DRIVING SPROCKET
0/005.400.4714 (u. 1) |
| 7 | COUNTERSHAFT WASHER
0/000.440.4711 (u. 1) |
| 8 | NUT M20
0/000.340.4719 (u. 1) |

 SELECTOR SHAFT

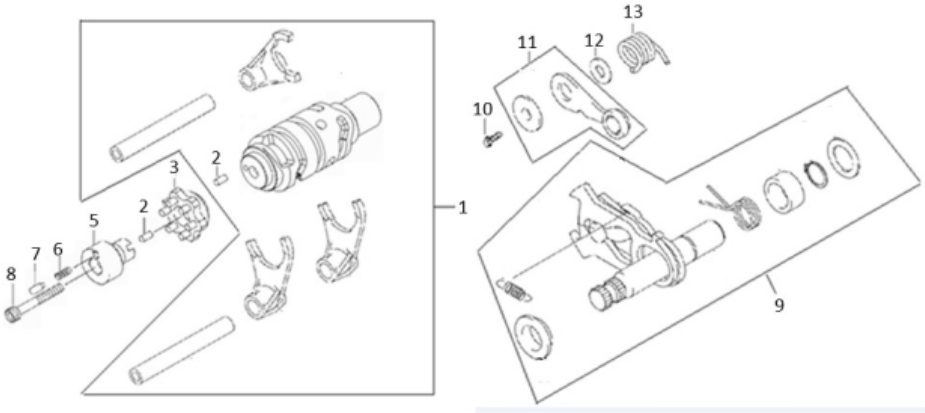


1	DESMODROMIC ASSEMBLY + GEAR SHIFT FORKS 0/005.090.4701 (u. 1)
2	PIN 0/000.240.4709 (u. 2)
3	CHANGE DRUM HOLDER 0/005.090.4702 (u. 1)
5	DESMODROMIC STAR STOPPER 0/005.090.4703 (u. 1)
6	SPRING 0/000.470.4706 (u. 1)
7	PIN 0/000.240.4705 (u. 1)
8	SCREW M6X35 0/000.460.4772 (u. 1)
9	COMPLETE GEAR SHIFT SHAFT 0/005.010.4703 (u. 1)
10	SCREW M6x20 0/000.460.4750 (u. 1)
11	COMPLETE GEAR STOPPER 0/005.560.4701 (u. 1)
12	WASHER Ø6xØ13 0/000.440.4717 (u. 1)
13	GEAR STOPPER SPRING 0/000.470.4710 (u. 1)

 OIL PUMP

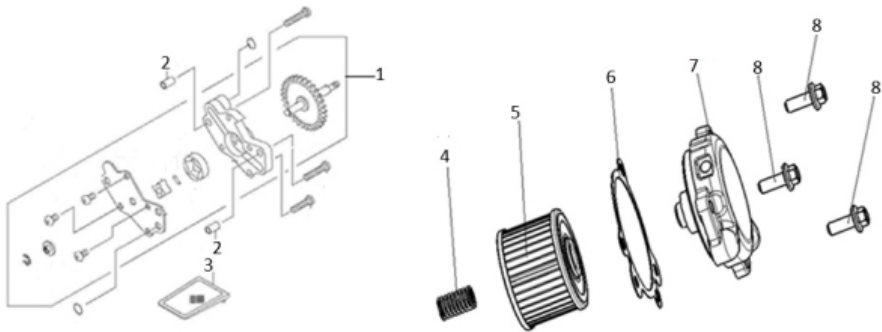


- | | |
|---|--|
| 1 |  OIL PUMP ASSEMBLY
0/000.860.4701 (u. 1) |
| 2 |  CRANKCASE JOINT DOWEL PIN
0/000.240.4707 (u. 2) |
| 3 |  OIL PUMP FILTER
0/001.070.4701 (u. 1) |
| 4 |  COMPRESSION SPRING
0/000.470.4707 (u. 1) |
| 5 |  SECONDARY OIL PUMP FILTER
0/001.070.4702 (u. 1) |
| 6 |  OIL FILTER COVER GASKET
0/000.490.4708 (u. 1) |
| 7 |  OIL FILTER COVER
0/000.350.4707 (u. 1) |
| 8 |  SCREW M6x16
0/000.460.4749 (u. 3) |

 COOLING SYSTEM

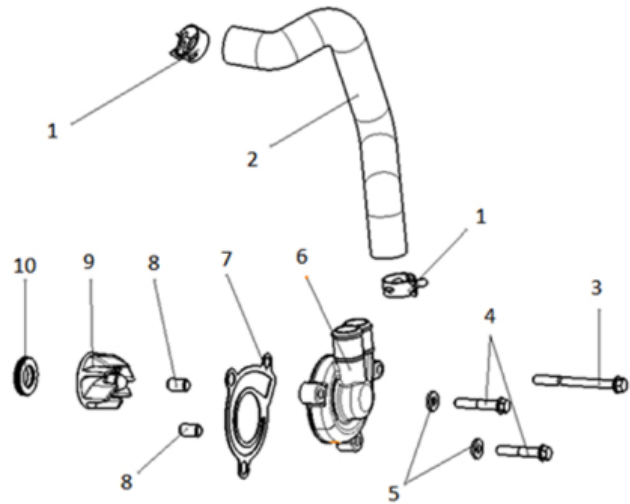

1	● WATER PUMP HOSE CLAMP 0/000.680.4707 (u. 2)
2	● WATER PUMP HOSE 0/000.290.4711 (u. 1)
3	● SCREW M6x65 0/000.460.4758 (u. 1)
4	● SCREW M6x35 0/000.460.4755 (u. 2)
5	● FLAT WASHER Ø6xØ13 0/000.440.4714 (u. 2)
6	● WATER PUMP COVER 0/000.350.4708 (u. 1)
7	● WATER PUMP COVER GASKET 0/000.490.4709 (u. 1)
8	● CRANKCASE JOINT DOWEL PIN 0/000.240.4707 (u. 2)
9	● WATER PUMP IMPELLER 0/005.220.4701 (u. 1)
10	● WATER PUMP SEAL RING 0/000.300.4701 (u. 1)

 
EMBRAGUE

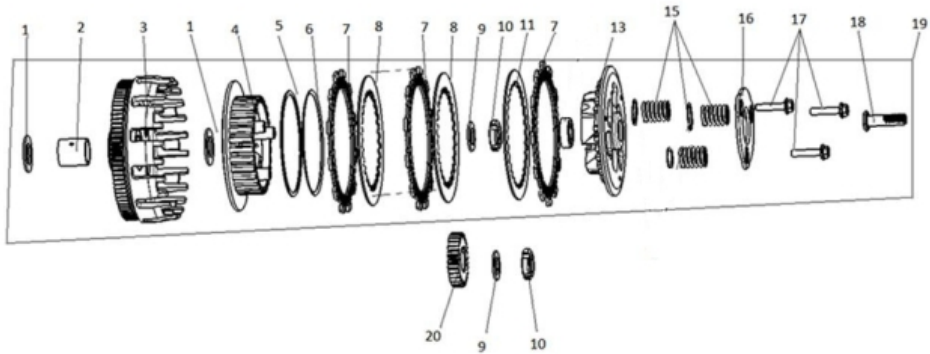

- | | |
|----|--|
| 1 | ● CLUTCH WASHER
0/000.440.4721 (u. 2) |
| 2 | ● CLUTCH BASKET BUSHING
0/000.480.4712 (u. 1) |
| 3 | ● CLUTCH BASKET
0/000.017.4701 (u. 1) |
| 4 | ● CLUTCH INNER HUB
0/000.017.4702 (u. 1) |
| 5 | ● CLUTCH PRESSURE WASHER 1
0/000.440.4722 (u. 1) |
| 6 | ● CLUTCH PRESSURE WASHER 2
0/000.440.4730 (u. 1) |
| 7 | ● CLUTCH FRICTION PLATE
0/005.350.4701 (u. 6) |
| 8 | ● DRIVEN FRICTION PLATE
0/005.350.4702 (u. 4) |
| 9 | ● CLUTCH PLATES WASHER
0/000.440.4729 (u. 2) |
| 10 | ● CLUTCH NUT M16
0/000.340.4720 (u. 1) |
| 11 | ● SECONDARY DRIVEN FRICTION PLATE
0/005.350.4703 (u. 1) |
| 13 | ● CLUTCH CLAMP PLATE
0/000.017.4704 (u. 1) |
| 15 | ● CLUTCH SPRING
0/000.470.4705 (u. 3) |
| 16 | ● CLUTCH PRESSURE PLATE
0/000.017.4703 (u. 1) |

17	SCREW M6x30 0/000.460.4770 (u. 3)
18	CLUTCH PUSH ROD 0/000.460.4746 (u. 1)
19	CJTO EMBRAGUE COMPLETO 0/000.017.4705 (u. 1)
20	PRIMARY DRIVE GEAR 0/005.400.4711 (u. 1)

 STATOR ASSY.

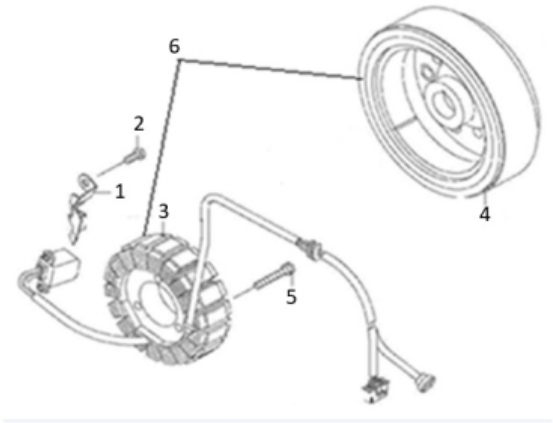

- | | |
|---|--|
| 1 | ● STATOR CABLE CLIP
0/000.680.4703 (u. 1) |
| 2 | ● SCREW M5X16
0/000.460.4757 (u. 2) |
| 3 | ● STATOR
0/005.820.4703 (u. 1) |
| 4 | ● ROTOR
0/005.820.4702 (u. 1) |
| 5 | ● SCREW M5X30
0/000.460.4766 (u. 3) |
| 6 | ● ROTOR + STATOR ASSEMBLY
0/005.820.4701 (u. 1) |